



AQUAPHOR PROFESSIONAL

APRO | 150/250/300/500 LPH

WATER PURIFICATION SYSTEM



Document	Original operation manual
Ident. No.	JOB No.: 1205-2023
Revision	02
Date	17.05.2023
Postal address	Aquaphor International OÜ Kadastiku 33a 21004 Narva Estonia
Factory & office	Aquaphor Kadastiku 33a 21004 Narva Estonia
Telephone	+3723562204
Copyright	No part of this documentation may in any form whatsoever be reproduced, nor used, copied or distributed by means of electronic systems without previous written permission by Aquaphor International. The translation into another language also requires a written authorization. This documentation may be exclusively entrusted to the owner of the installation or to the employees of Aquaphor International.
Technical modification	Revision No 2

Table of contents


1. SYSTEM OVERVIEW	6
1.1. System's equipment.....	6
1.2. Table of system's equipment	9
2. ELECTRIC CIRCUIT	10
3. CONTROL PANEL	16
3.1. General information.....	16
3.2. Panel.....	16
4. TECHNICAL DATA DESCRIPTION	17
4.1. Water quality requirements.....	17
4.2. Installation room requirements	17
4.3. Reverse Osmosis data	18
5. INSTALLATION	19
5.1. Preparation	19
5.2. First startup	20
6. CONFIGURATION	21
6.1. Start up.....	21
6.2. System run panel.....	22
6.3. Equipment Setup.....	23
6.4. Programs	24
6.5. Setups.....	25
7. ALARMS AND TROUBLESHOOTING	27
7.1. Cartridge source warning.....	27
7.2. Equipment testing mode.....	27
7.3. Alarms and troubleshooting.....	28
8. RO ANDROID APP (APRO APP)	29
8.1. Setting up	29
8.2. System configuration	30
8.3. Operating Mode Functionality	30
8.4. Additional Information.....	31
8.5. GSM Module Status	32
8.6. Additional Information.....	32
9. MAINTENANCE	33
9.1. Dosing Pump Degassing	33
9.2. Replacing The Membrane Module.....	34
9.3. Replacing the prefilter cartridge (Gross).....	38
9.4. Membrane Cleaning (CIP)	39
9.5. Membrane Cleaning (CIP)	41

uS/cm to ppm conversion table	44
9.6. Preservation of RO and NF systems	45
10. SYSTEM INFORMATION COLLECTION VIA MODBUS	46
10.1 Modbus communication port setpoints.....	46
10.2 Viewing/Setting Modbus setpoints	46
10.3 Network Communication Protocol.....	46
10.4 RO Settings (Read Only)	46
10.5 Control Word.....	47
10.6 Modbus Registers.....	48
Status words	48
11. RULES OF STORAGE AND TRANSPORTATION	51
11.1. Shipping.....	51
12. SERVICE AND WARRANTY	52
Exclusions and Limitations	52
13. Additional Materials.....	53
System Equipment list	55


1. SYSTEM OVERVIEW

1.1. System's equipment


APRO-I-150 and APRO-I-250

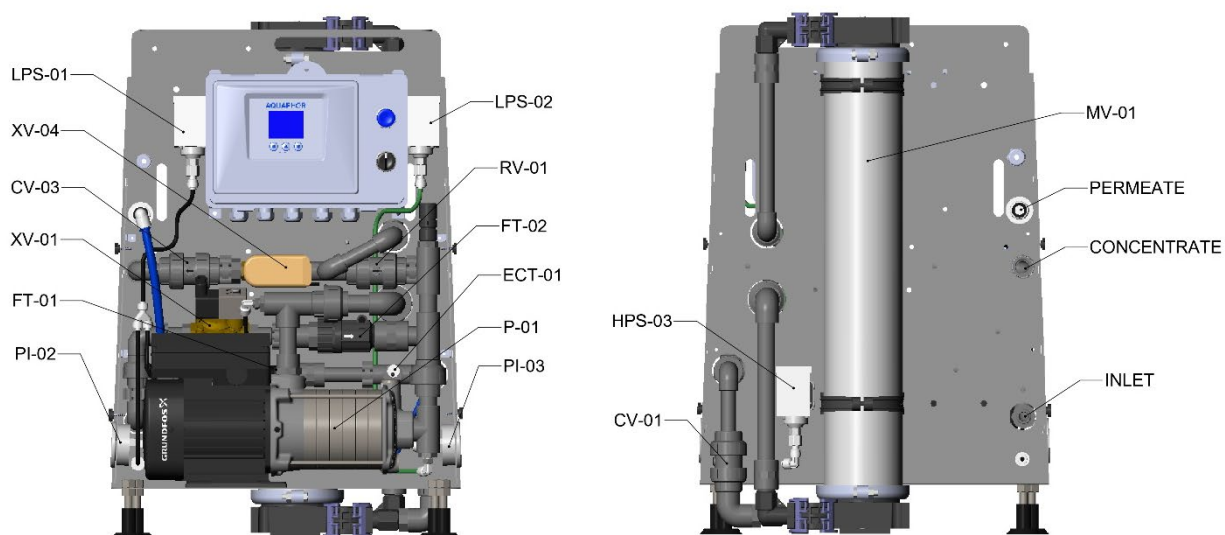


 
 





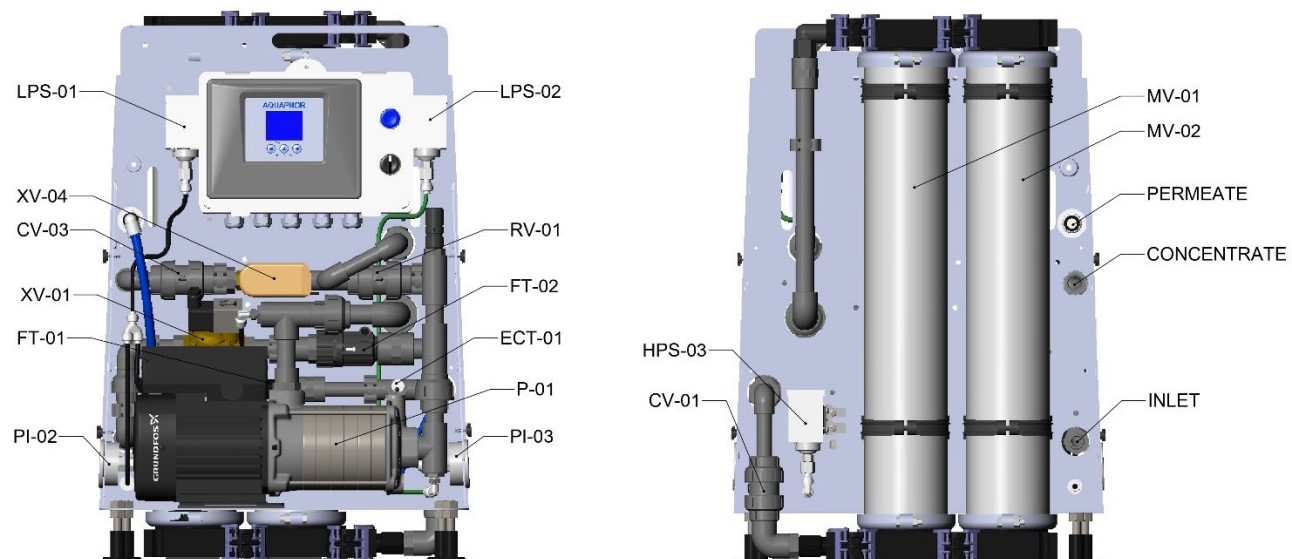



APRO-I-300 and APRO-I-500

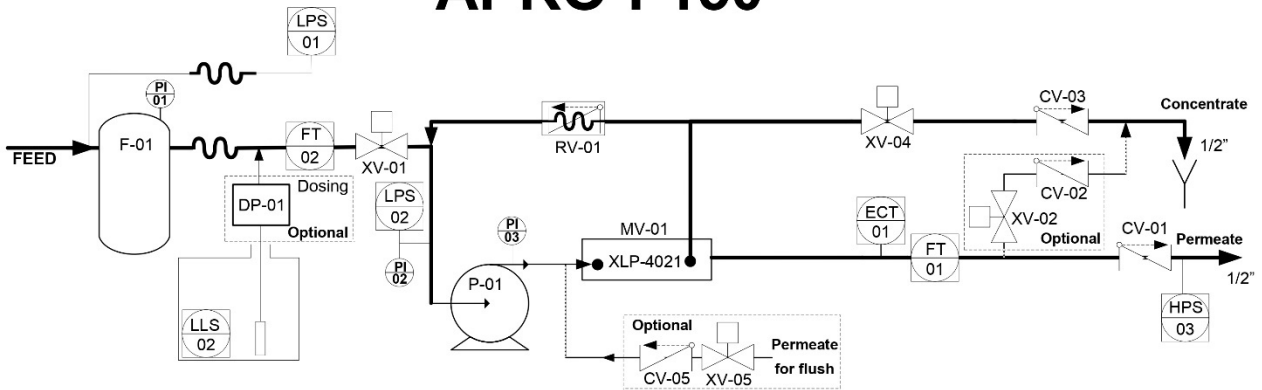




    
 
 


 

 
 

APRO-I-150

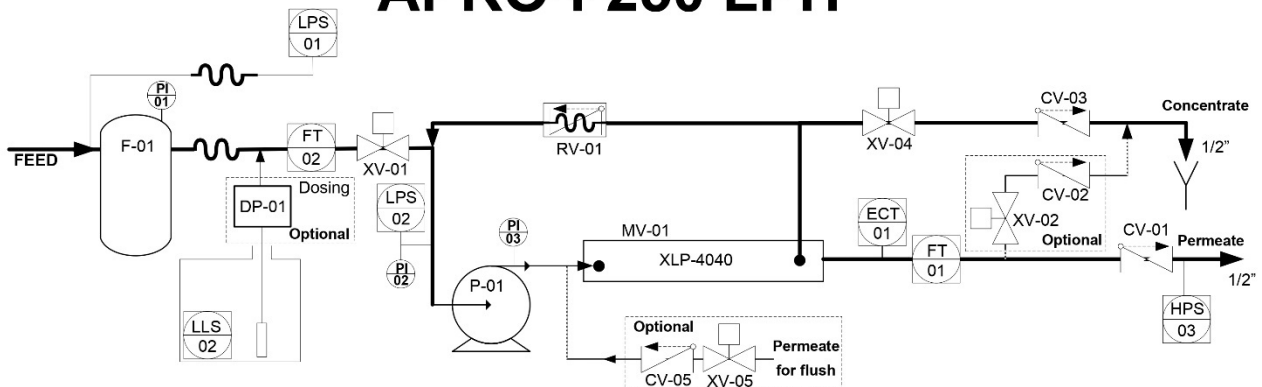


Item	Description	Item	Description	Item	Description	Item	Description
	Flow trans.		Actuated valve		Check valve		Pump
	Pressure switch		Level Switch.		Pres. indicator		Memb. housing
	Conductiv. trans		Restriction valve		Pressure switch		Filter housing













APRO-I-250 LPH




Item	Description	Item	Description	Item	Description	Item	Description
	Flow trans.		Actuated valve		Check valve		Pump
	Pressure switch		Level Switch.		Pres. indicator		Memb. housing
	Conductiv. trans		Restriction valve		Pressure switch		Filter housing

             
 
 
 
 
 
 
 
 

 
 
APRO-I-300 LPH

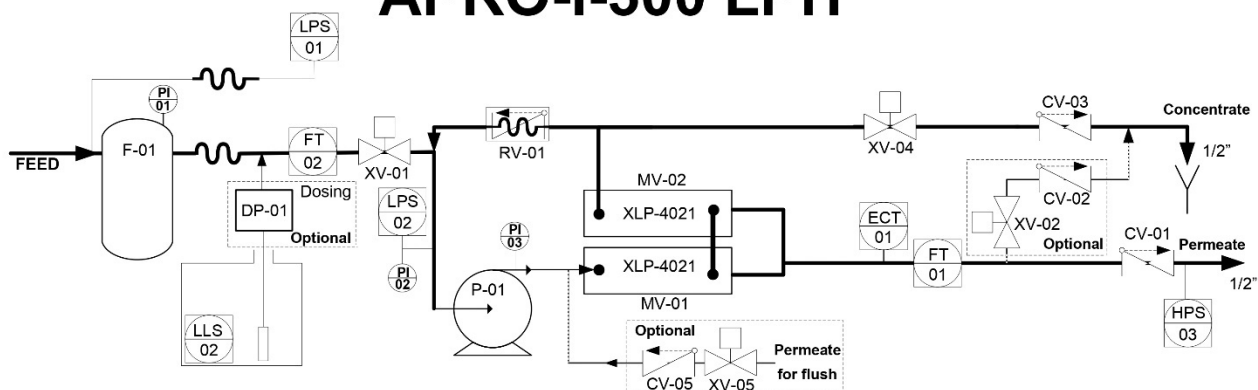

Item	Description	Item	Description	Item	Description	Item	Description
	Flow trans.		Actuated valve		Check valve		Pump
	Pressure switch		Level Switch.		Pres. indicator		Memb. housing
	Conductiv. trans		Restriction valve		Pressure switch		Filter housing

APRO-I-500 LPH

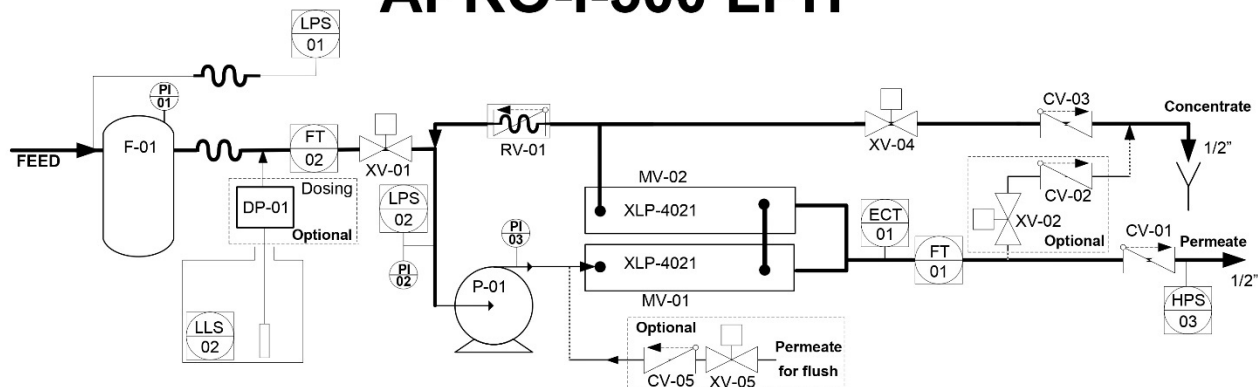

Item	Description	Item	Description	Item	Description	Item	Description
	Flow trans.		Actuated valve		Check valve		Pump
	Pressure switch		Level Switch.		Pres. indicator		Memb. housing
	Conductiv. trans		Restriction valve		Pressure switch		Filter housing


1.2. Table of system's equipment

Tag	Name	Function
LPS-01	Low Pressure switch	
F-01	Cartridge Filter Housing	Feed water filtration cartridge
PI-01	Pressure Indicator	
P-01	Pressure pump	Builds up pressure and supply water to reverse osmosis membranes.
LPS-02	Low Pressure switch	
PI-03	Pressure indicator	
P-02	Recirculation pump	Concentrate recirculation pump. Serves to recirculate concentrate through the osmotic membranes.
DP-01	Dosing pump (optional)	Doses feed water antiscalant
LLS-02	Low Level Sensor (optional)	Protects DP-01 from dry running (antiscalant low level).
LPS-02	Low pressure switch	Low-pressure sensor at the RO inlet. Protects the system from dry running in case of failure of XV-01 or depletion of the cartridge resource.
PI-02	Pressure Indicator	
FT-02	Feed flow sensor	Inlet water flow sensor.
FT-01	Permeate flow sensor	Permeate line flow sensor.
XV-01	Feed valve	The valve for supplying feed water to the reverse osmosis system.
XV-02	Drainage valve (optional)	First permeate drainage.
XV-04	Concentrate valve	Concentrate drainage valve.
XV-05	Flushing valve (optional)	Stand-by permeate membrane flushing valve.
ECT-01	Permeate conductivity sensor	Reverse osmosis permeate conductivity sensor.
CV-01	Check valve	Permeate supply check valve.
CV-02	Check valve (optional)	Permeate drainage check valve.
CV-03	Check valve	Check and back pressure valve.
CV-04	Check valve	Check valve.
CV-05	Check valve (optional)	Stand-by permeate check flushing valve.
MV-01	Membrane housing	XLP-4021 membrane housing (XLP-4040 for APRO I 250)
MV-02	Membrane housing	XLP-4021 membrane housing (XLP-4040 for APRO I 250)
RV-01	Restriction Valve	
HPS-03	Pressure Switch	

2. ELECTRIC CIRCUIT


- All elements of the electrical circuit are assembled and require no additional intervention except for the connection of additional equipment. The unit is equipped with fully automated control. It can supply purified water using the logic controller, water level, and pressure sensors, based on an adjustable algorithm, standardized for the reverse osmosis systems manufactured by Aquaphor.
- The controller program works as part of the AFE-002-000 electronic complex and controls the reverse osmosis systems of various APRO configurations.


! The connection of auxiliary equipment must be carried out by certified specialists with the appropriate knowledge, skills, and experience working on this equipment. The manual setting of additional installation modes is possible only with the help of the switchboard and controller.

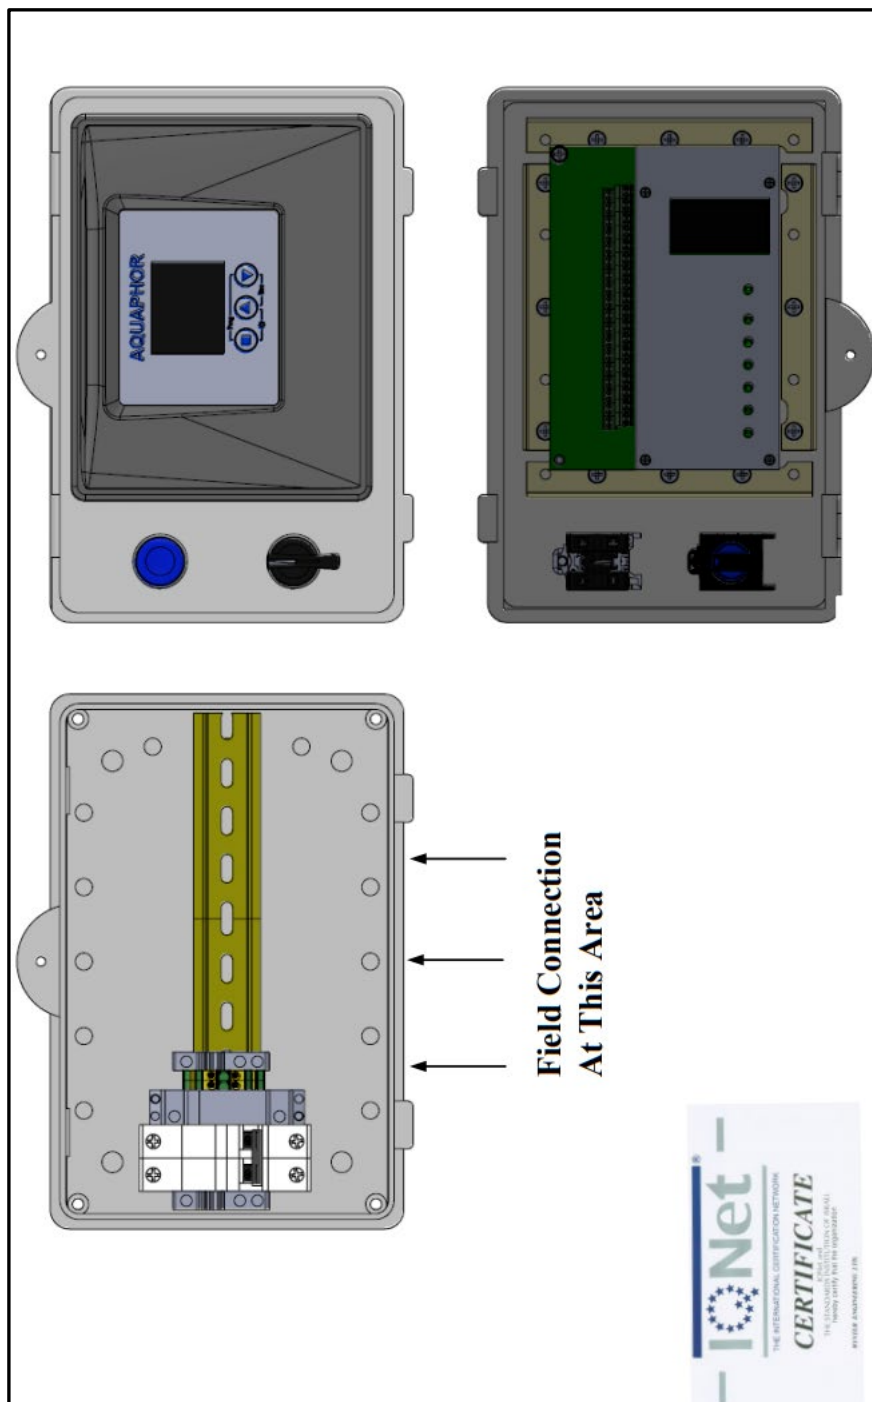



Electric control circuit diagram for APRO-150/250/300/500

2

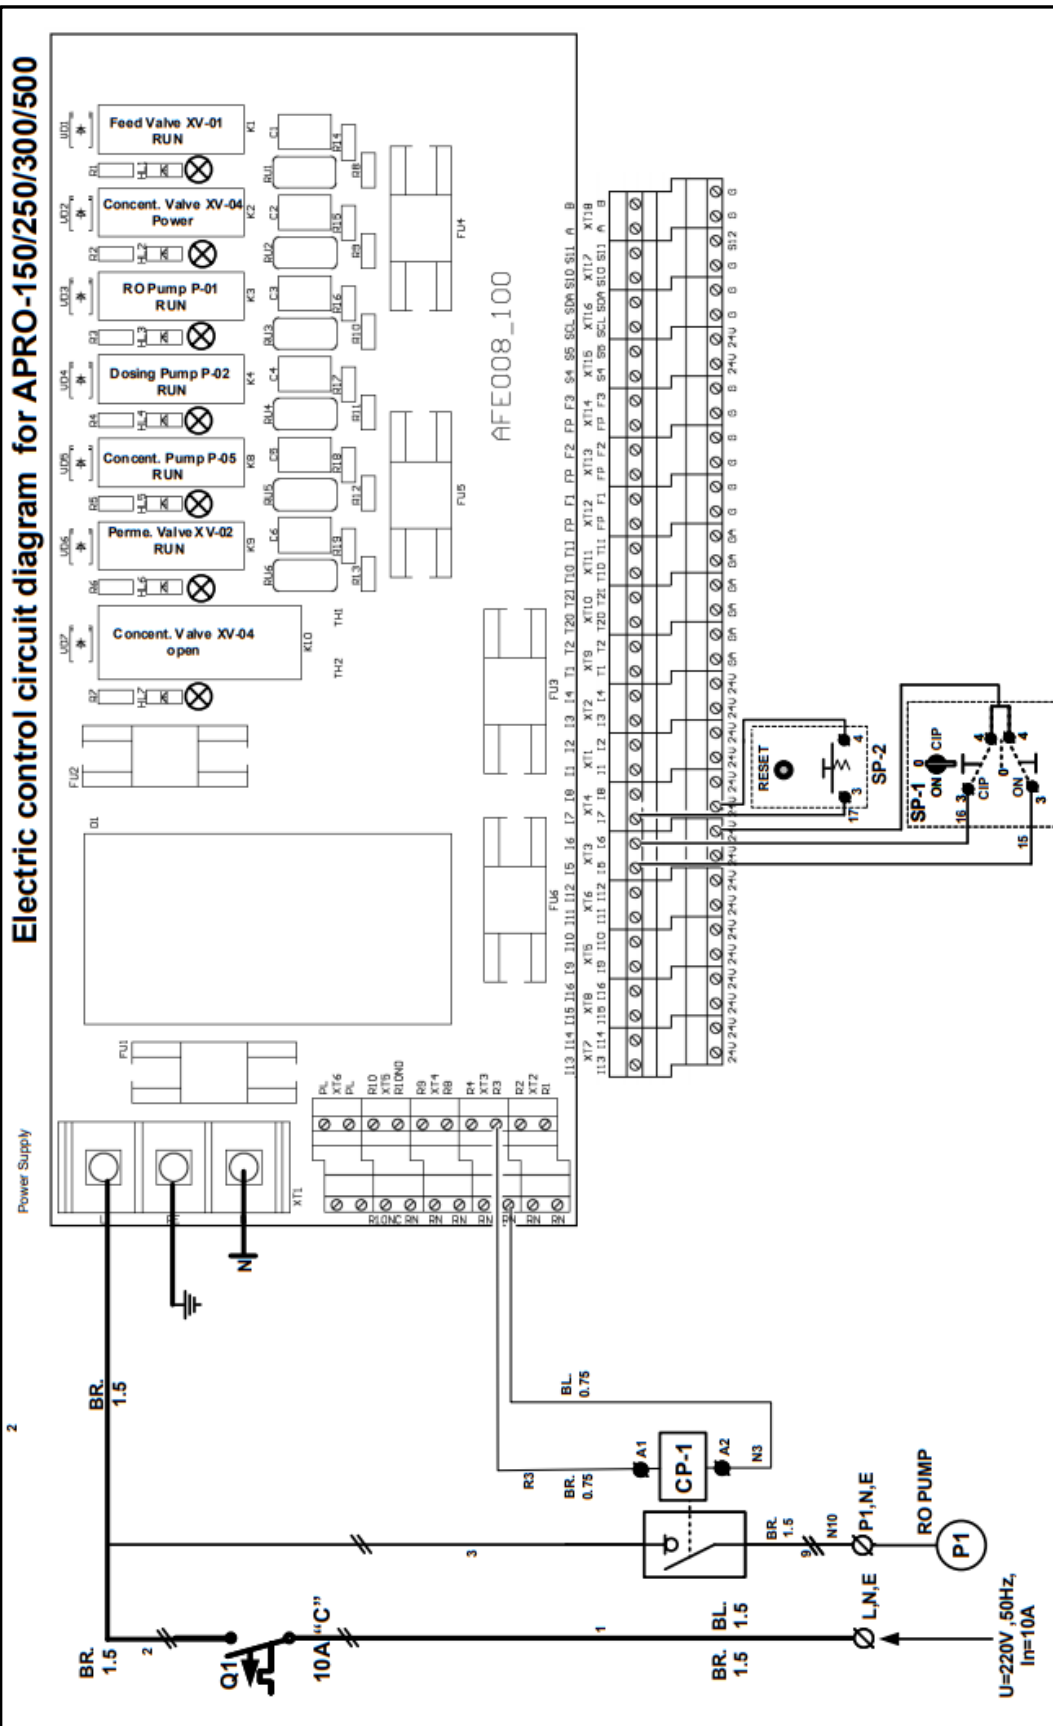


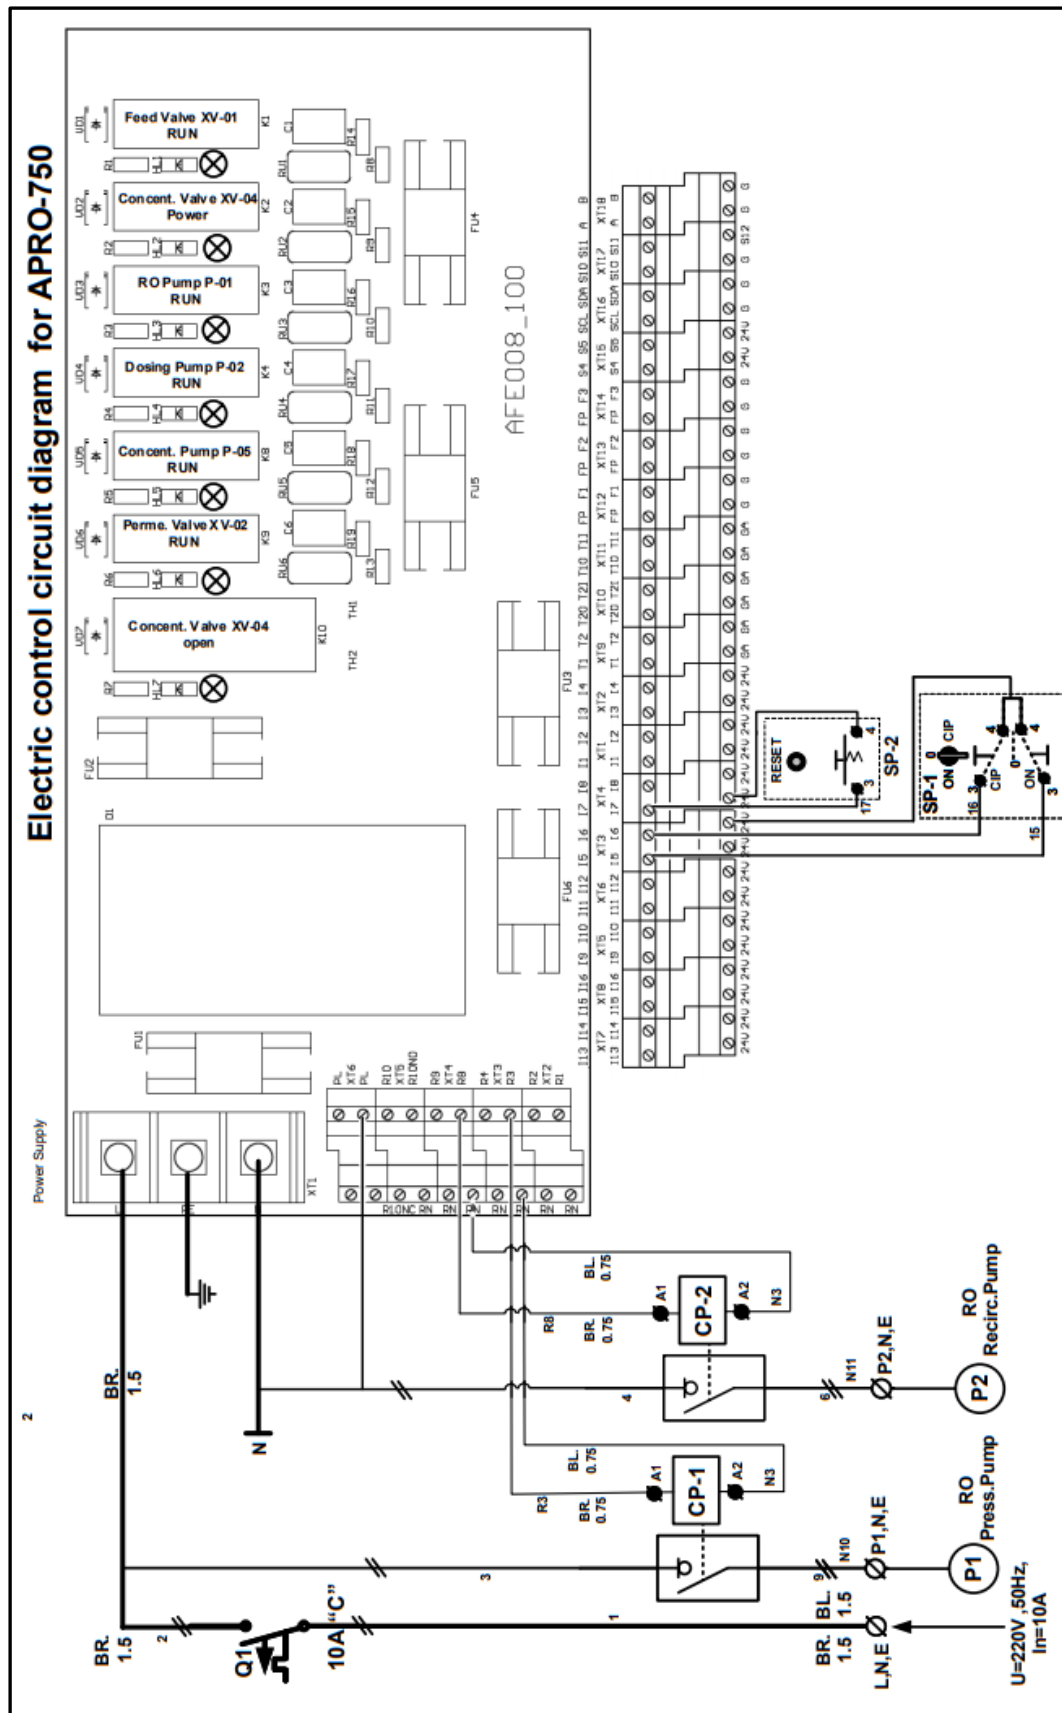

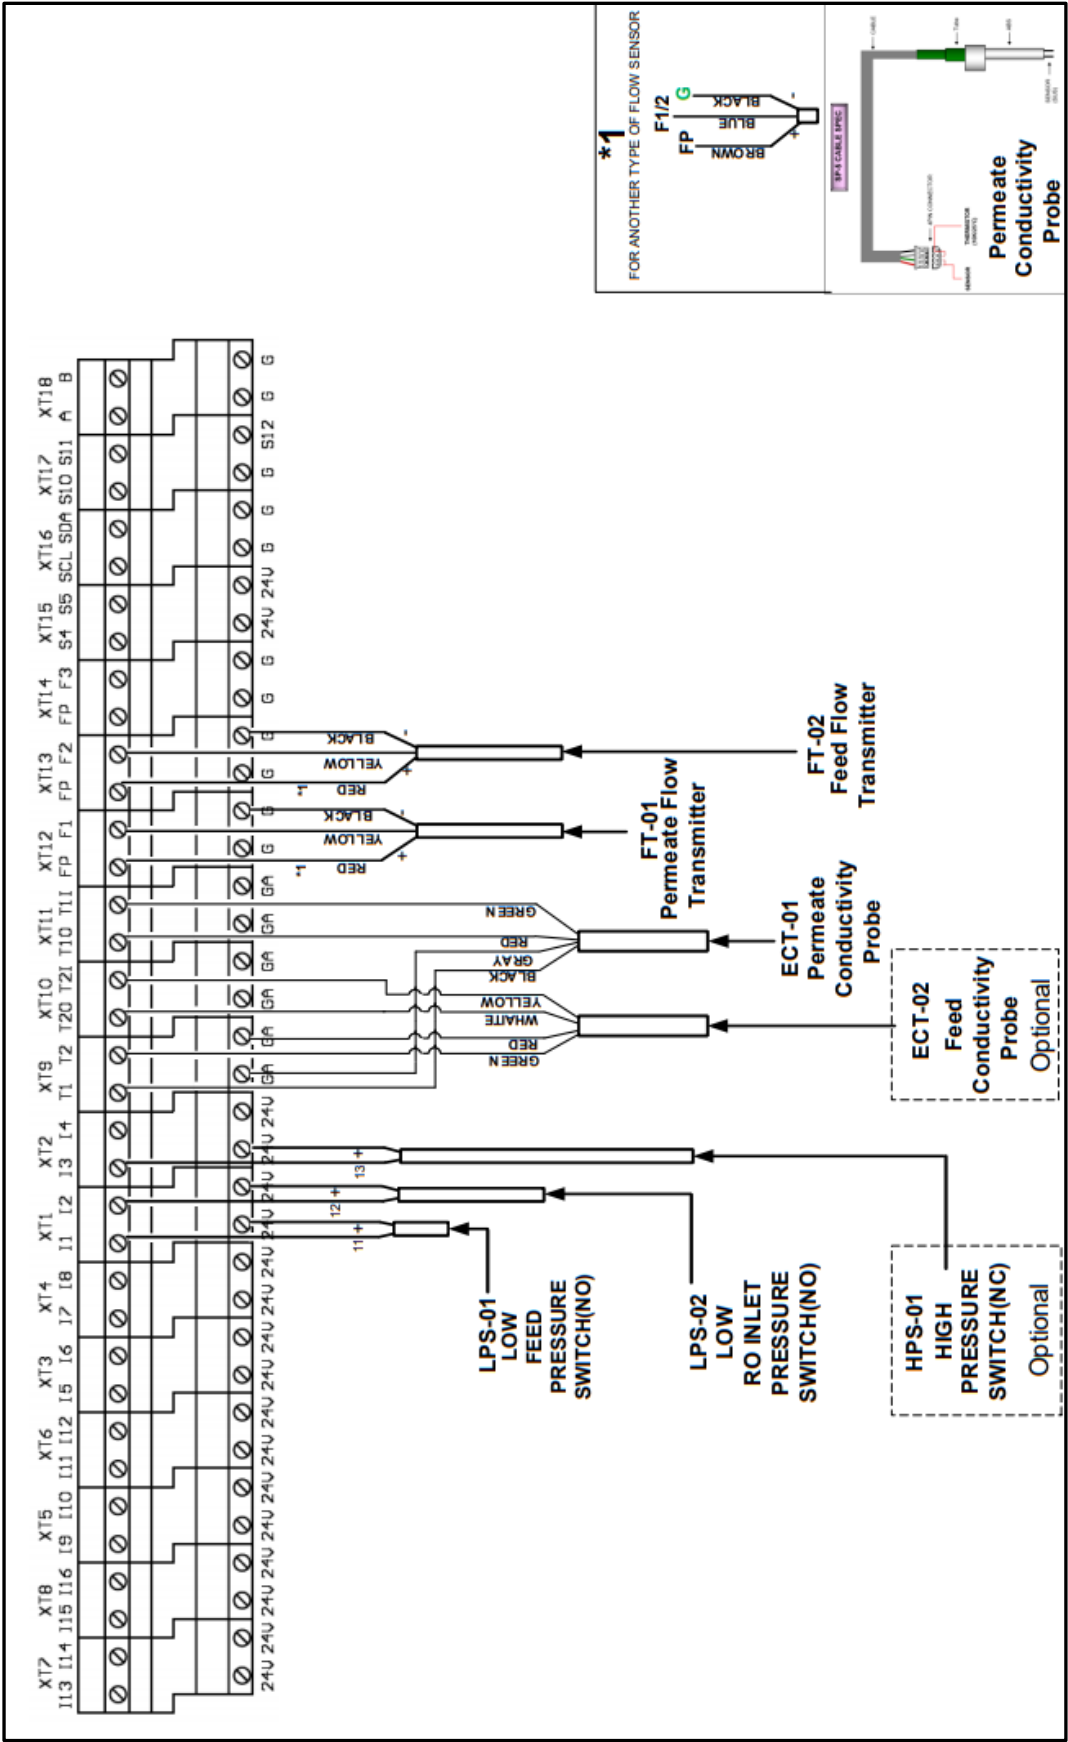

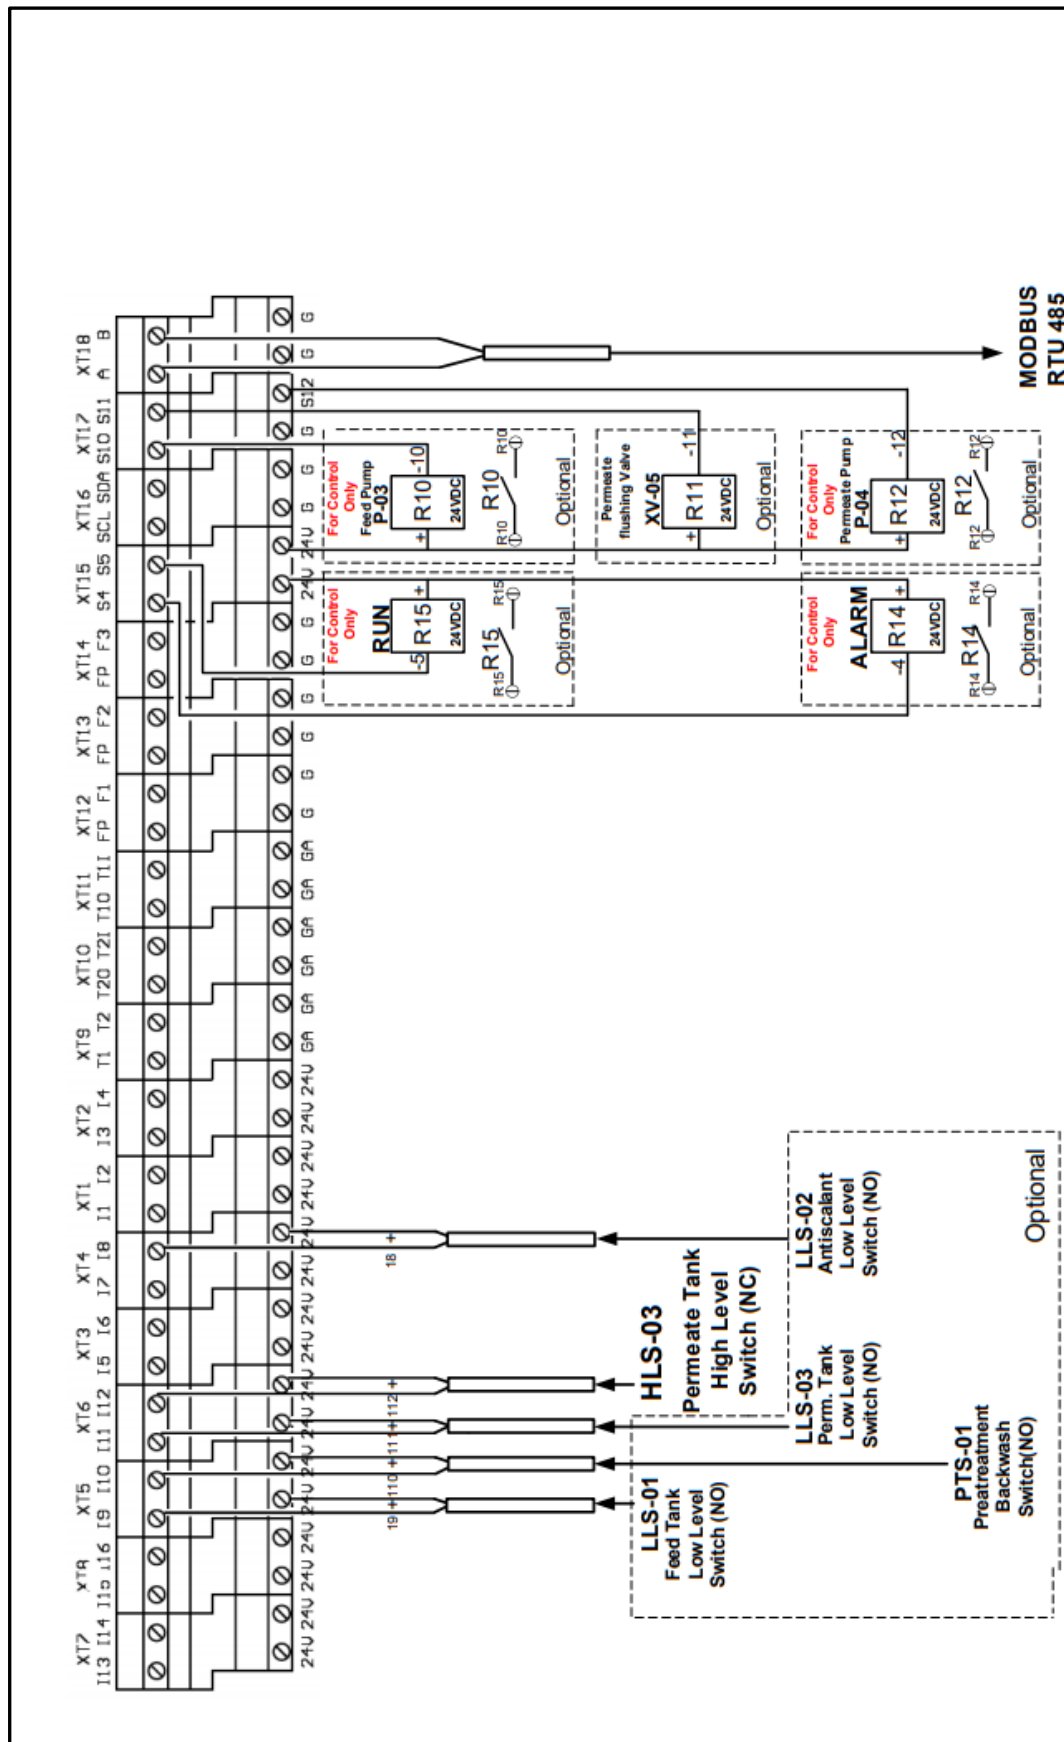

Electric control circuit diagram

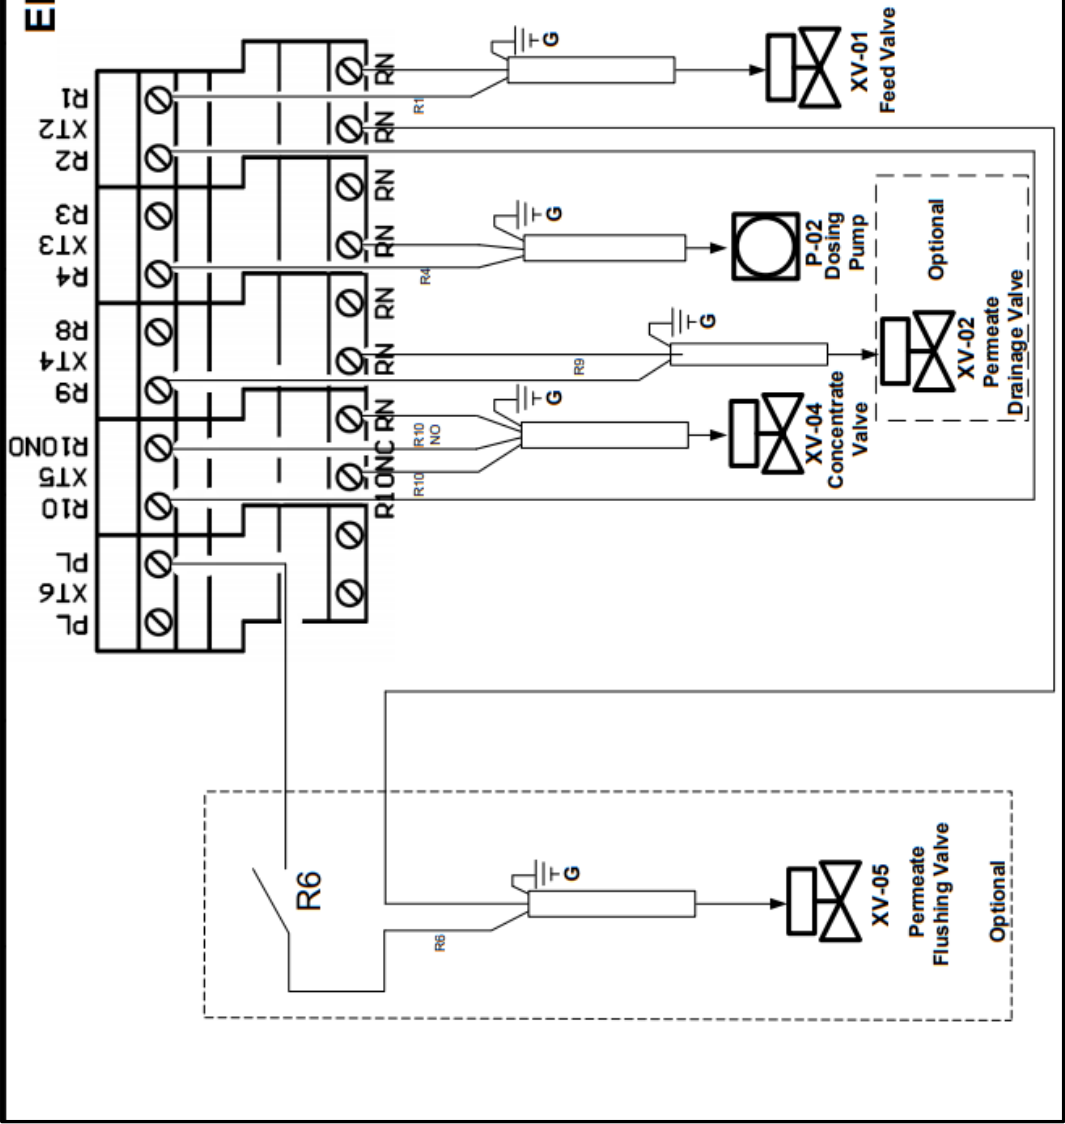


3. CONTROL PANEL

3.1. General information

- The controller is protected by an osmosis control panel with IP-55 standard class and higher.
- The system nodes are controlled through the power board.
- The commutation of the controller and the power board is realized through quick-detachable connections.

3.2. Panel

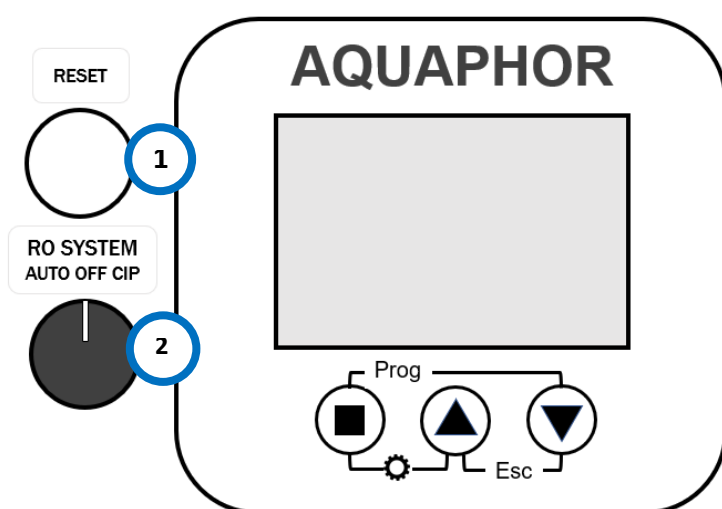

№	ELEMENT	FUNCTION
1	«Reset» button	Resetting the current program (return to the start window SYSTEM OFF).
2	«RO system» mode switcher	OFF - Standby mode AUTO - Automatic mode CIP - Service Mode

4. TECHNICAL DATA DESCRIPTION

4.1. Water quality requirements

Designation	Unit	Value
Water supply for the reverse osmosis system		
Temperature	°C	5 - 30
Turbidity factor	NTU	<1
Blocking factor (sludge / index of sedimentation density)	SDI	<3
Flow pressure	bar	2.5 - 6
Salinity	ppm	<2000
Total hardness	°dH	0 - 15
pH under constant operation	-	6.5 - 9
Short term for the rinse	-	1 - 12
Odour	-	odourless
Oil	mg/l	0
Free chlorine	mg/l	0
Iron	mg/l	<0.1
Manganese	mg/l	<0.1
Sewage		according to local regulations

4.2. Installation room requirements

Designation	Unit	Value
Temperature	°C	5 to 40
Lighting	lx	at least 150
Source of fresh air	-	aerate and deaerate sufficiently

4.3. Reverse Osmosis data

Designation	Unit	Value
Permeate		
Operating pressure max.	bar	7-9
Power	kW	0.7
Control	W	10
APRO I 150LPH		
With 25 °C	l/h	150
With 10 °C	l/h	110
APRO I 250LPH		
With 25 °C	l/h	250
With 10 °C	l/h	200
APRO I 300LPH		
With 25 °C	l/h	300
With 10 °C	l/h	220
APRO I 500LPH		
With 25 °C	l/h	500
With 10 °C	l/h	380
Connections		
Raw water	NW	¾"
Concentrate	NW	½"
Permeate	NW	½"
Pressure fluctuations max.	bar	± 1
RO salt retention rate max.	%	90 - 95
Operating temperature	°C	10 - 40
Surrounding temperature	°C	4 - 40
Electric connection		
Connection	-	1/N/PE
Voltage	V	230
Frequency	Hz	50
Power	kW	1.2
Nominal current	A	10

5. INSTALLATION

5.1. Preparation

- **Concentrate connection:** Install a hose between the concentrate outlet of the reverse osmosis unit and the sewer junction and let it hang 10 to 15 cm over the drain, to prevent the contamination of the unit.
- **Permeate connection:** Install a hose temporarily between the outlet for permeate of the reverse osmosis unit and the sewer junction.

1. System Location

The RO system should be located away from direct sunlight, wind and rain. You should also account for freezing temperatures and remember that lower temperatures reduce production. It would also be wise to leave plenty of room around the unit for future service.

2. Plumbing

The high-pressure pumps that feed the RO unit require a constant flow of water at a sufficient flow rate.

3. Feed Water

Piping for the feed water should be either copper or plastic as iron or carbon steel pipe could increase the iron content of the feed water. Temperature of the feed water should not exceed 35° C. This unit comes equipped with pressure differential safety shut-off on the pre-filter so as not to starve the pump of water. This will also let you know when to change the pre-filter.

4. Product Water (Permeate) Line Connection & Primary membrane flushing

All of our equipment comes with a built-in check valve on the permeate line.

Note: When starting up a new unit, it should run to drain for 30-60 minutes to flush the new membranes. Be sure this product line is not shoved into a drain. If possible, run the product line from above with a substantial air-gap spraying into the drain from above. The normal plumbing code is at least twice the diameter of the drain pipe. A larger gap is preferable to avoid splashing of water from the drain. This may allow bacteria growth that may be able to migrate back into the unit thus causing a potential problem.

5. Concentrate or Waste Line Connection

Connect the concentrate or waste line to the outlet side of the concentrate flow meter. Run this line to an open drain with no restriction and leave an airgap at the drain end. Please, follow all local plumbing codes.

6. Electrical

Properly sized electrical service is required for proper operation of system.

7. Level Controls

Level controls are a float type in an atmospheric storage tank or a O-float level valve. Both are optional with our equipment and can be installed by us. Either one are wired directly into the controller and are controlled by the controller.

8. Pumps

All of our units come with heavy-duty pumps and they are not self-priming. Never let a pump run dry. This may damage the pump and void the warranty.

9. Pre-Filtration

Our units are equipped with a sediment pre-filter which will remove particles down to 5 microns in size. As this pre-filter plugs up it will restrict the flow of water. At this point the controller will shut down the unit until the filter is changed. This option is standard on our equipment. Depending on the feed water, more pre-treatment may be necessary. A water analysis is required to determine the need

10. Installation.

Prior to start-up, carefully inspect the system for loose connections that may have loosened during shipping.

11. Membrane installation

Should the membranes need to be installed or replaced, be sure to notice how they were removed. The flow of water will always be from the end of the membrane with the brine seal to the end without the brine seal.

5.2. First startup

1. Unpack the system and place it to the permanent place of work.
2. Make sure the membranes and filter cartridges are installed.
3. Connect the inlet connection to the raw water supply.
4. Connect the electricity plug to ~220 V.
5. Connect the dosing suction pipe to the antiscalant tank.
6. Before starting work, move RO switcher to the AUTO position, make sure to perform degassing (Check 10.1 Dosing pump degassing)
7. Connect permeate connector to the permeate supply line.
8. System is ready.

If an additional atmospheric permeate tank is used, connect the permeate line via float switch. If a permeate supply pump (P-04) is used, connect the low level switch (LLS-03) to the control panel.

6. CONFIGURATION

APRO I 150/250/300/500 systems can be configured in two ways:

- By using the three-button keyboard of the controller.
- By using the APRO Monitor application on the screen of a mobile device.

6.1. Start up


When power is applied to the switchboard, the program starts in the System OFF mode, opening the start window with the following parameters:

- | | |
|---|--|
| 1. The current time and date | 6. Errors that prevent the installation from starting in-filtration mode |
| 2. The name of the program | 7. The serial number of the board |
| 3. The name of the production | 8. The program version |
| 4. The possibility of starting the system infiltration mode | 9. The availability of Wi-Fi |
| 5. The position of the three-position switch | 10. The availability of mkS card |

In the start window, you can perform the following operations:

- Switching using a three-position hereinafter switch to the "AUTO" position. The system will enter the filtering mode through the "Start-Up" mode.
- Switching the switch to the "CIP" position. The system will enter the state of chemical flushing system elements.
- Pressing the "OK" ■ button on the three-position switch for 2 seconds will turn on the system statistics window for 4 seconds (the function is convenient for defining service intervals).
- x the calibration routine of the TDS (Total Dissolved Solids) sensors.
- Pressing the "OK" ■ and "Down" ▼ buttons on the three-position switch simultaneously will start the subroutine for configuring system devices.

If the starting parameters meet the system's requirements, then an indication of the system operation will be displayed on the controller screen:

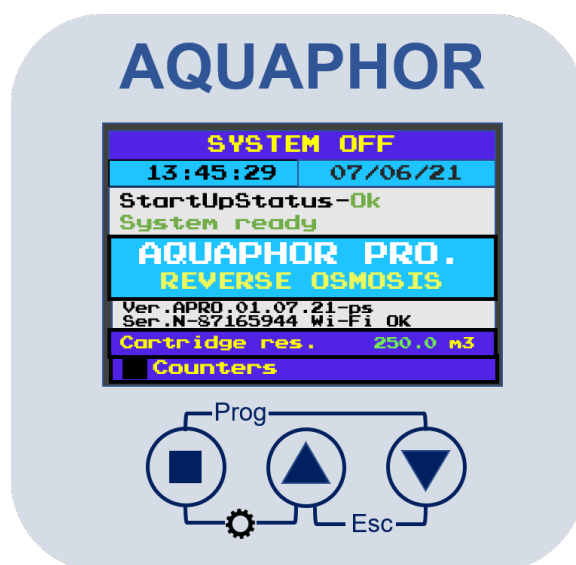


6.2. System run panel.

System run panel has a few types of display, representing the current parameters of the system. Pressing “Up” and “Down” ▼ buttons will switch the display to another one.



General display

- Permeate conductivity (μS)
- Permeate flow (LPM)
- Current errors
- Current flush

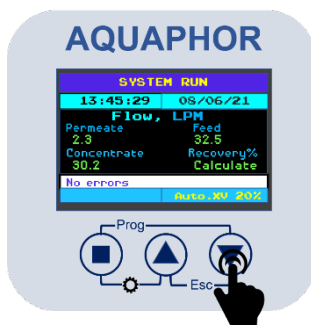

Flows display

- Permeate flow (LPM)
- Concentrate flow (LPM)
- Feed flow (LPM)
- Recovery, %



Conductivities display

- Permeate conductivity (μS)
- Permeate temperature, $^{\circ}\text{C}$
- Feed conductivity (μS)
- Feed temperature, $^{\circ}\text{C}$




Cartridge display

- Resource, m^3 – a countdown of a remaining resource. Resource should be set up initially (7.5, **Setup-16**)
- Pressure drop, bar

6.3. Equipment Setup


1. Move the switch to the **OFF** position to start setting up the system.

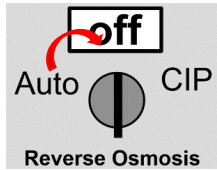

2. Perform dosing pump degassing (**Maintenance, 10.1**).
3. Make sure there is no leakage.
4. Check all the setups and programs
5. Whenever the low level sensor is off, it is recommended to perform P-04 deaeration (**Maintenance, 10.1**).

Example:


1. To enter the settings menu, use the controller's three-button keyboard located under the monitor screen.

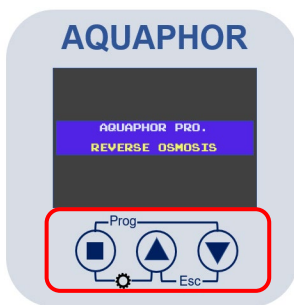

2. To open **Configuration** menu, press the “Ok” ■ and “Down” ▼ buttons.



3. If you want to add or exclude an element from the system, press the “Up” ▲ button. By pressing the “Ok” ■ button, we confirm the selection and proceed to the next element of the system.

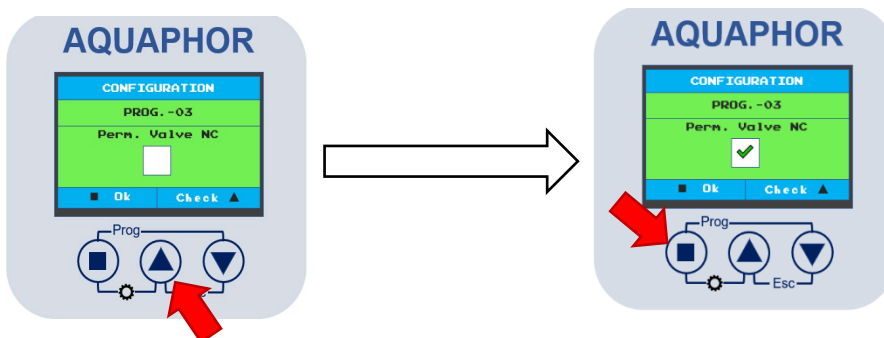

6.4. Programs

01 Feed Pump (P-01)*	
-	If the input water does not meet the requirements of this manual for the minimum pressure and required volume, the system can be connected to the existing water supply through the raw water supply system. For this program, a pump for raw water should be added. By default, a storage tank with feed water is also added. The feed water pump works under the following conditions: <ul style="list-style-type: none"> ▪ The program is activated ▪ The three-position switch is in the "AUTO" position ▪ There is enough water in the storage tank. ▪ There is a signal from the RO system to start work
02 Pretreatment (F-01/F-02)	
-	This program turns on the water pretreatment process. The pretreatment system (PTS-01) will carry out the regeneration according to a given program, and the results will be displayed on the controller screen. During this period, the RO system is in waiting mode. The time of the pretreatment regeneration does not depend on the controller settings. When the pretreatment regeneration mode is activated, all RO system units turn OFF, and the feed water feed pump turns on. After finishing the regeneration process, the system continues to work automatically.
03 Permeate Valve NC (XV-02)	
-	Presence of a primary permeate drainage valve (XV-02). The valve turns on when the set value of the product electrical conductivity is exceeded. During the system operation, the drainage valve opening symbol will be displayed on the controller during the frequency reset (the green arrow indicator should be in the right upper corner)
04 Supply Pump (P-04)	
-	If there is a need to quickly supply a large volume of purified water quickly, a non-pressurized RO water supply system can be connected. The reverse osmosis system will fill the additional tank with RO water to the specified level.
05 Permeate Flow transmitter (FT-01)	
✓	Enables/disables permeate flow sensor (FT-01).
06 Feed flow transmitter (FT-02)	
✓	Enables/disables feed flow sensor (FT-02).
07 High pressure switch (HPS-01)	
-	Enables/disables high pressure switch (HPS-01).
08 Permeate Flush (XV-05)	
-	Whenever the system is in stand-by mode, enables membrane flush with permeate. Permeate is supplied by XV-05 valve.
09 Pulse Dosing	
-	Enables pulse dosing control. System is lacking pulse dosing. Program is not require
10 Dosing Level SW. (LLS-02)	
-	Enables/disables low antiscalant level switch.
12 Dosing Pump RO (DP-01)	
-	Enables dosing pump (DP-01).
13 Permeate Conductivity transmitter	
✓	Enables RO permeate conductivity sensor (ECT-01).
14 Feed Conductivity transmitter (optional)	
-	Enables feed water conductivity sensor (ECT-02).
15 Conductivity (uSm to ppm)	
-	Changing the units of conductivity to $\mu\text{Sm/PPM}$.
16 L/GAL – C/F	
-	Changing the units from Liters and Celsius to Gallons and Fahrenheit. Default units are Liters and Celsius
17 GSM Module port	
-	Enables/Disables GSM module port.

6.5. Setups

Setup 01	Start-up flush
10 sec	Setting the start-up flush time. The recommended value is 10 sec.
Setup 02	Shut-down flush
10 sec	Setting the shut-down flush time. The recommended value is 10 sec.
Setup 03	Stand-by-flush
12 h	Setting the stand-by flush period (period in hours). The recommended value is 1 hour.
Setup 04	High permeate conductivity alarm
100 mS	Setting the point for the product conductivity limit (max value). The recommended value is 100 mS.
Setup 05	High feed water conductivity alarm (optional)
2000 mS	Setting the maximum value for the feed conductivity limit. The recommended value is 2000 mS.
Setup 06	Low press. Delay
10 sec	Setting the delay to stop the system after a signal of low input pressure is received. The recommended value is 10 sec.
Setup 08	Permeate flow, K
=>	Setting the number of pulses per liter. The recommended value for: APRO I 150 – 205K APRO I 250 – 230K APRO I 300 – 260K APRO I 500 – 235K Note: the parameter is set by flowmeter manufacturer.
Setup 09	Feed flow, K
47K	Setting the number of pulses per liter. The recommended value for: APRO I 150 – 47K APRO I 250 – 46K APRO I 300 – 45K APRO I 500 – 46K Note: the parameter is set by flowmeter manufacturer.
Setup 10	Automatic concentrate valve open time
75 sec	Setting the automatic concentrate valve open time. The recommended value is 40 sec.
Setup 11	Automatic concentrate valve flush opening
70%	Setting the automatic concentrate valve flush opening %. The recommended value is 50%.

Setup 12 Automatic concentrate valve run opening

Setting the automatic concentrate valve opening % while running.

	APRO I 150	APRO I 250	APRO I 300	APRO I 500
50%	(Set-12) 38%	(Set-12) 50%	(Set-12) 49%	(Set-12) 65%
55%	(Set-12) 35%	(Set-12) 47%	(Set-12) 45%	(Set-12) 61%
60%	(Set-12) 33%	(Set-12) 42%	(Set-12) 42%	(Set-12) 56%
65%	(Set-12) 32%	(Set-12) 39%	(Set-12) 39%	(Set-12) 51%
70%	(Set-12) 31%	(Set-12) 35%	(Set-12) 36%	(Set-12) 45%
75%	(Set-12) 30%	(Set-12) 34%	(Set-12) 34%	(Set-12) 40%
80%	(Set-12) 29%	(Set-12) 32%	(Set-12) 32%	(Set-12) 36%
85%		(Set-12) 30%	(Set-12) 30%	(Set-12) 32%
90%		(Set-12) 27%	(Set-12) 49%	(Set-12) 30%

Setup 13	Full tank delay										
5 sec	Setting the delay to stop the system after the full tank signal is received (HPS-02). The recommended value is 5 sec.										
Setup 14	Permeate Low Flow alarm										
1.0 LPM	Setting the minimum permeate flow signaling to stop the system The recommended value is 0.1 LPM.										
Setup 15	Concentrate Low Flow alarm										
1.0 LPM	Setting the minimum concentrate flow. The recommended value is 1.0 LPM.										
Setup 16	Cartridge filter resource										
300 m2	Setting the cartridge filter resource. Set up every time you replace the cartridge <div> <i>System model</i> <i>Set-16 – Cartridge filter resource</i> <table> <tr><td>APRO 150</td><td>200m3</td></tr> <tr><td>APRO 250</td><td>300m3</td></tr> <tr><td>APRO 300</td><td>200m3</td></tr> <tr><td>APRO 500</td><td>300m3</td></tr> <tr><td>APRO 750</td><td>300m3</td></tr> </table> </div>	APRO 150	200m3	APRO 250	300m3	APRO 300	200m3	APRO 500	300m3	APRO 750	300m3
APRO 150	200m3										
APRO 250	300m3										
APRO 300	200m3										
APRO 500	300m3										
APRO 750	300m3										
Setup 17	System ID number										
1	Setting the system ID number (1-255). The value is 1.										
Setup 18	Year										
2023	Setting the year (18-50). The value is 2023.										
Setup 19	Date/Month										
	Setting the date (DD:MM).										
Setup 20	Time										
	Setting the time (hh:mm).										


7. ALARMS AND TROUBLESHOOTING

If there is any critical error in operation, the system is switched to the "Alarm" error mode. The "Alarm" window contains information about:

- the name(s) of critical error(s)
- the number of critical errors
- the time until the next attempt to restore the system

To enter the standby state and return to the start window, move the switch to the OFF position. In case of the system's automatic reset after the minor errors, the program switches the system through the "Start-Up" mode to the filtering mode.

7.1. Cartridge source warning

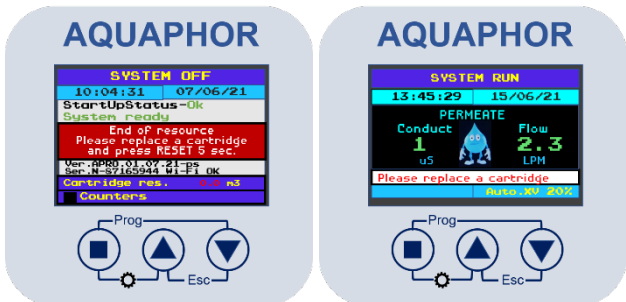


Solution: Replace the cartridge and press RESET for 5 sec.


7.2. Equipment testing mode

Equipment testing mode allows to check the condition of each system's element.

1. Turn the switch to the CIP position.
2. Press ▼ for 3 seconds. The following screen will appear:

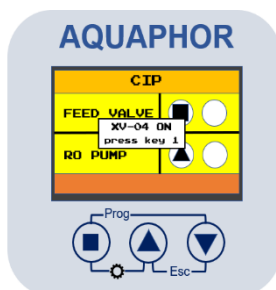

3. Press ■ to enable/disable the system's element and switch to the next one.

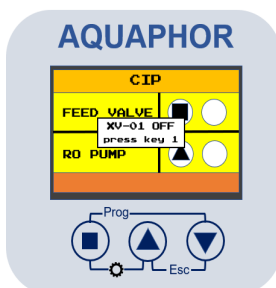

4. To close equipment testing mode, put the switch to the OFF position.

7.3. Alarms and troubleshooting

Alarm №	Symptoms	Possible causes	Corrective Action
Alarm-01	Low level in the raw water tank	Low level in the raw water tank T-01	Check the presence of raw water; otherwise, check RO water supply and LLS-01 functionality.
Alarm-02	Pretreatment system error	The pre-filtration system is in the PTS-01 regeneration mode for > 3 hours	Check the functionality of pretreatment equipment, RO system controller cable, and pretreatment system controller.
Alarm-03	Antiscalant tank low level	No signal from the LLS-02 in the antiscalant T-02 tank for 10 seconds.	Check the presence of antiscalant or/and sensor functionality
Alarm-04	Raw water low pressure	No signal from the LPS-01 in the supply line for a specified time (Setup. -06)	Check RO water supply and LPS-01 functionality.
Alarm-05	Low inlet pressure	No signal from the LPS-02 in the water supply line to the RO system for a specified time (Setup-06).	Check the functionality of RO water supply, LPS-02, XV-01.
Alarm-06	High inlet pressure to RO membrane unit	No signal from the HPS-02 at the membrane inlet for 10 seconds.	Perform CIP or change the membrane, check HPS-02 functionality.
Alarm-07	RO pump overload	A signal is received from the thermal protection of the pump motor of the RO system P-01.	Check RO pump P-01 overload functionality.
Alarm-08	High electrical conductivity of permeate	The conductivity value of the RO system product is bigger than the set value (Setup-04) for 5 minutes	Perform PCP-01 calibration, perform CIP, or change the membrane.
Alarm-09	Minimum value of permeate flow	The osmosis system permeate flow value is less than the set value (Setup-14) for 5 minutes.	Check the functionality of FT-01. Perform CIP, or change the membrane.
Alarm-10	Minimum concentrate flow	The osmosis system permeate flow value is less than the set value (Setup-14) for 5 minutes.	Check the functionality of the concentrate sensor and automatic concentrate valve XV-04.
Alarm-11	Low permeate level	There is no signal from the LLS-03 low water level sensor in the T-03 permeate tank for 20 minutes.	Check permeate presence in the tank.
Alarm-12	High feed conductivity	The conductivity of the raw water of the RO system is greater than the set value for 5 minutes	Check the raw water supply, functionality of ECT-02 and pretreatment system.

8. RO ANDROID APP (APRO APP)


APRO Monitor app functionality:

- Data transfer in the local network
- Setting up the equipment programs and its setups
- Monitoring parameters in a running system, viewing a log, statistics.
- Alarms display




! APRO Monitor app is available for Android OS only

8.1. Setting up

1. Download and install the APRO Monitor app from the official website of the system manufacturer (aquaphor-pro.com) to your mobile device. The link can be found in the footer:

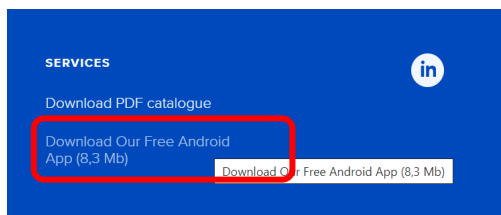


2. Open the app.
3. Configure the connection.
 - a) Open the context menu and choose “Connection”.
 - b) Press OK.
 - c) Choose “APRO_XXXX” network.
 - d) Select “Connect” in the pop-up window.

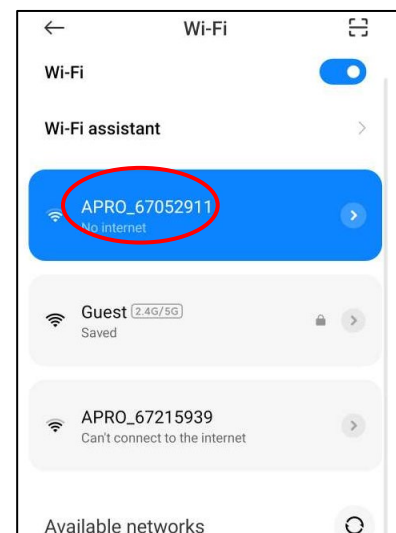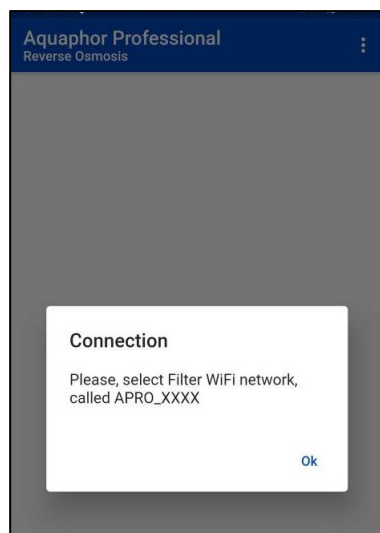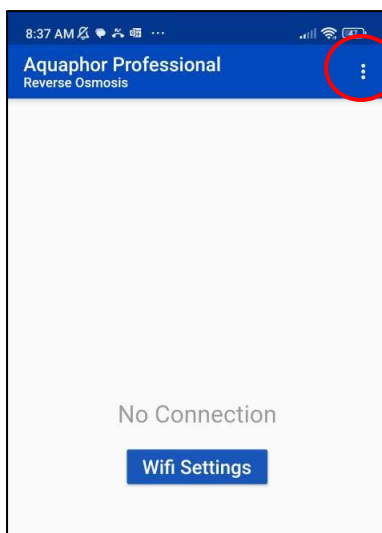


4. Back in the context menu, choose “System’s Settings”.
5. Select the equipment and click “Save”.


8.2. System configuration

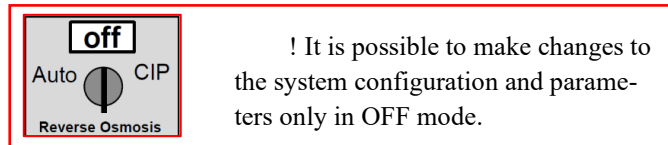

The starting screen displays the system configuration and available reverse osmosis (RO) system's option **(1)**. System Settings window **(2)** has two subparts: "Configuration" enables or disables programs 01-16. "Settings" window **(3)** changes the setups of the active programs.

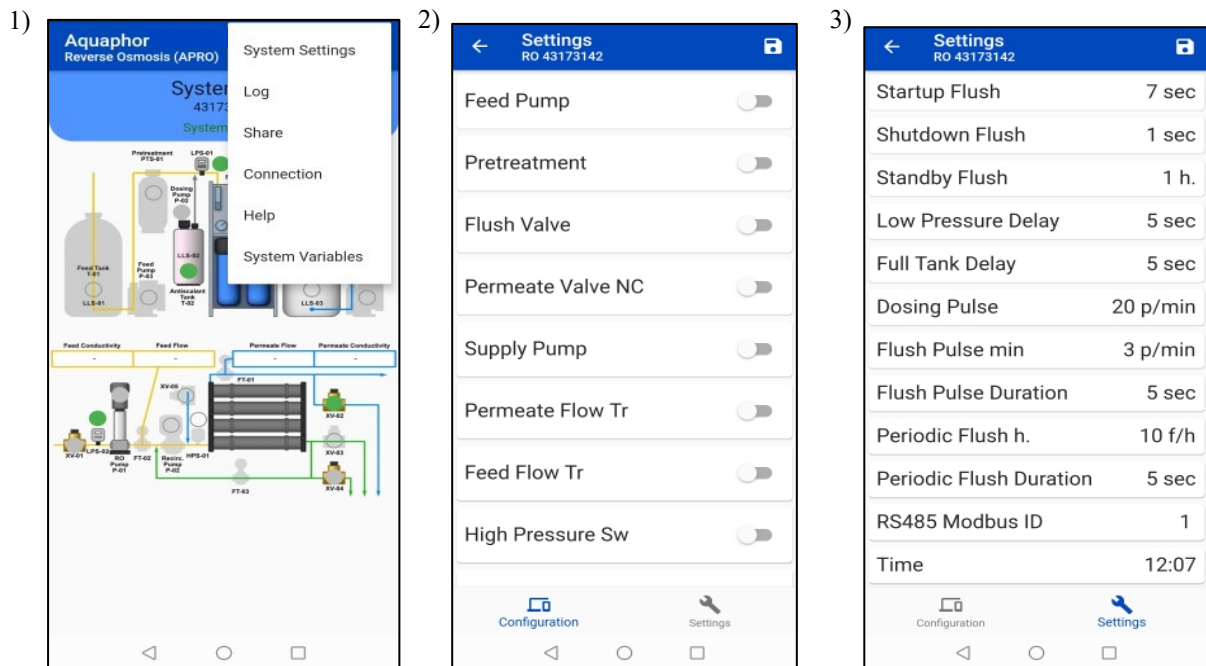


8.3. Operating Mode Functionality

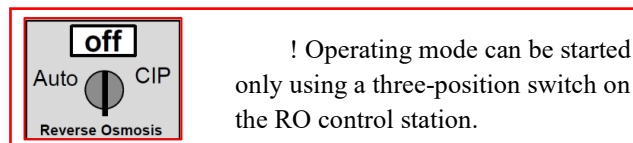


When the system is operating, the following data is available:

- Total operating hours
- Amount of permeate produced
- The amount of water used
- Overall system performance
- Date and time of starts/stops
- Change of modes
- Operating time of each mode

The “Log” button of the context menu shows statistics and log of the system.

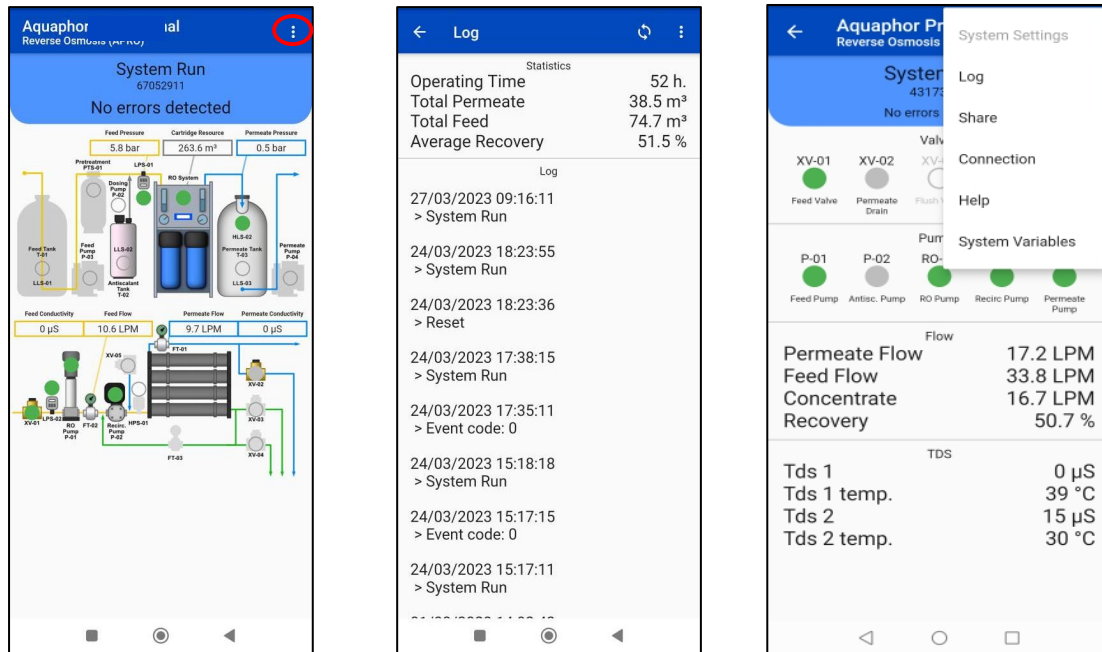

It is possible to share the statistics with other users and devices. The “Share” button of the context menu suggests several options (browser and messenger).

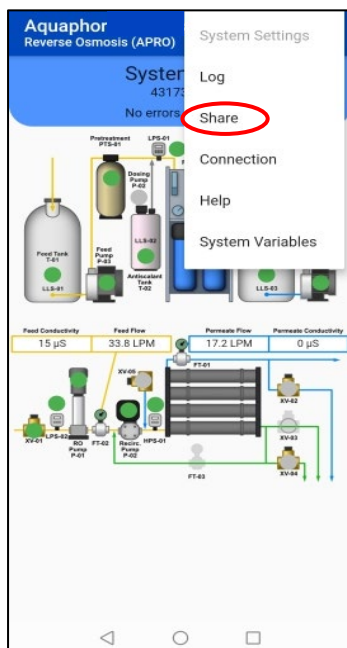

8.4. Additional Information

The context menu also contains the “Help” option. A detailed description of APRO application capabilities can be found there.

8.5. GSM Module Status

Status	Explanation
Ok	No errors
Disconnected	GSM module is not detected by the system. Perhaps the module is turned off or there is no wired connection between the GSM module and the system
No SIM	There is no SIM card, or the SIM card is installed incorrectly.
No GSM	There is no connection with the GSM network, the SIM card may be damaged, or the SIM card / provider is not compatible with the GSM module.
No GPRS	There is no internet connection, perhaps the current tariff does not provide internet connection, or the SIM card has run out of money
No server connection	No data collection server was found. The server may not be configured correctly.
Server auth failed	Server found, authorization error. Please check if the password was set correctly.



8.6. Additional Information

The context menu also contains the “Help” option. A detailed description of APRO application capabilities can be found there.

9. MAINTENANCE

9.1. Dosing Pump Degassing

After antiscalant replacement, it is required to perform dosing pump degassing.

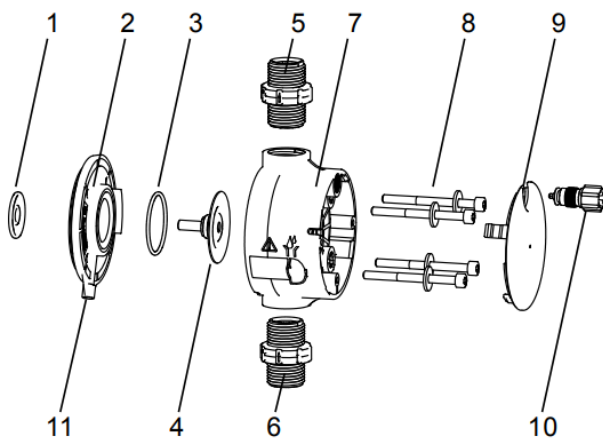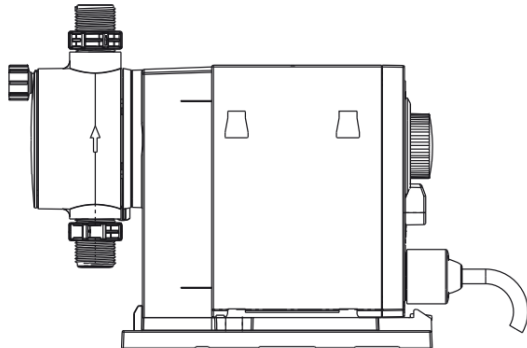

Dosing head, exploded view.

1. Safety diaphragm
2. Flange
3. O-ring
4. Diaphragm
5. Valve on discharge side
6. Valve on suction side
7. Dosing head
8. Screws with discs
9. Cover
10. Deaeration valve
11. Drain opening


Start and deaerate the pump.

1. Connect mains supply. Make sure the system is turned on.
2. Open the deaeration valve by approximately half a turn.
3. DDE-B control variant: Turn the capacity adjustment knob to 100 % and wait until liquid flows out of the deaeration hose continuously and without any bubbles. Then set the capacity adjustment knob back to 0,1-1 % (depending on the water quality and antiscalant type).
4. Close the deaeration valve.


The pump is deaerated.

9.2. Replacing The Membrane Module


APRO-I-150 Caps scheme

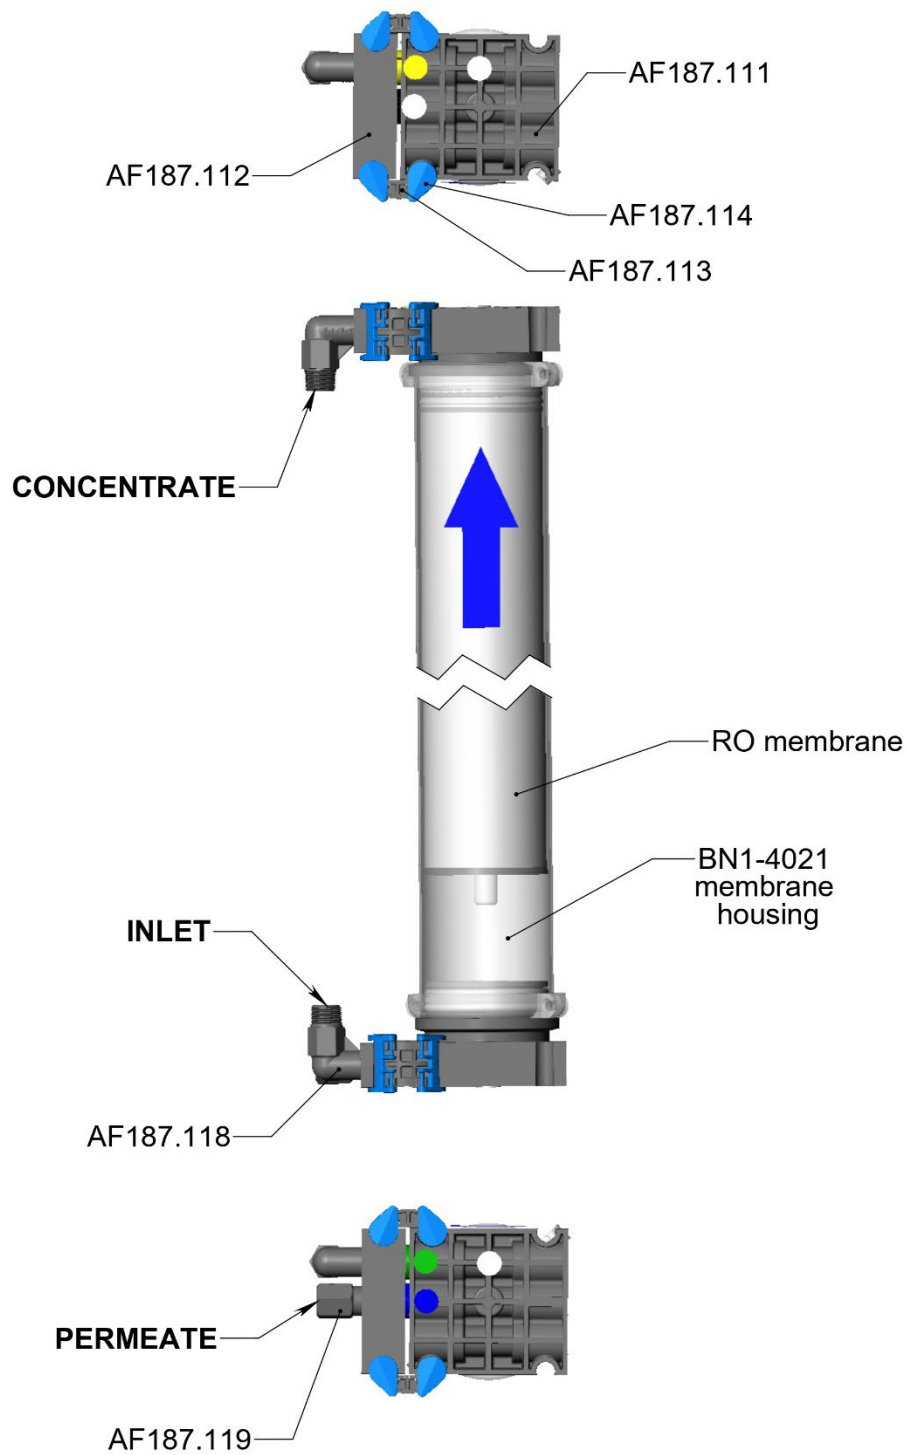


APRO-I-250 Caps scheme

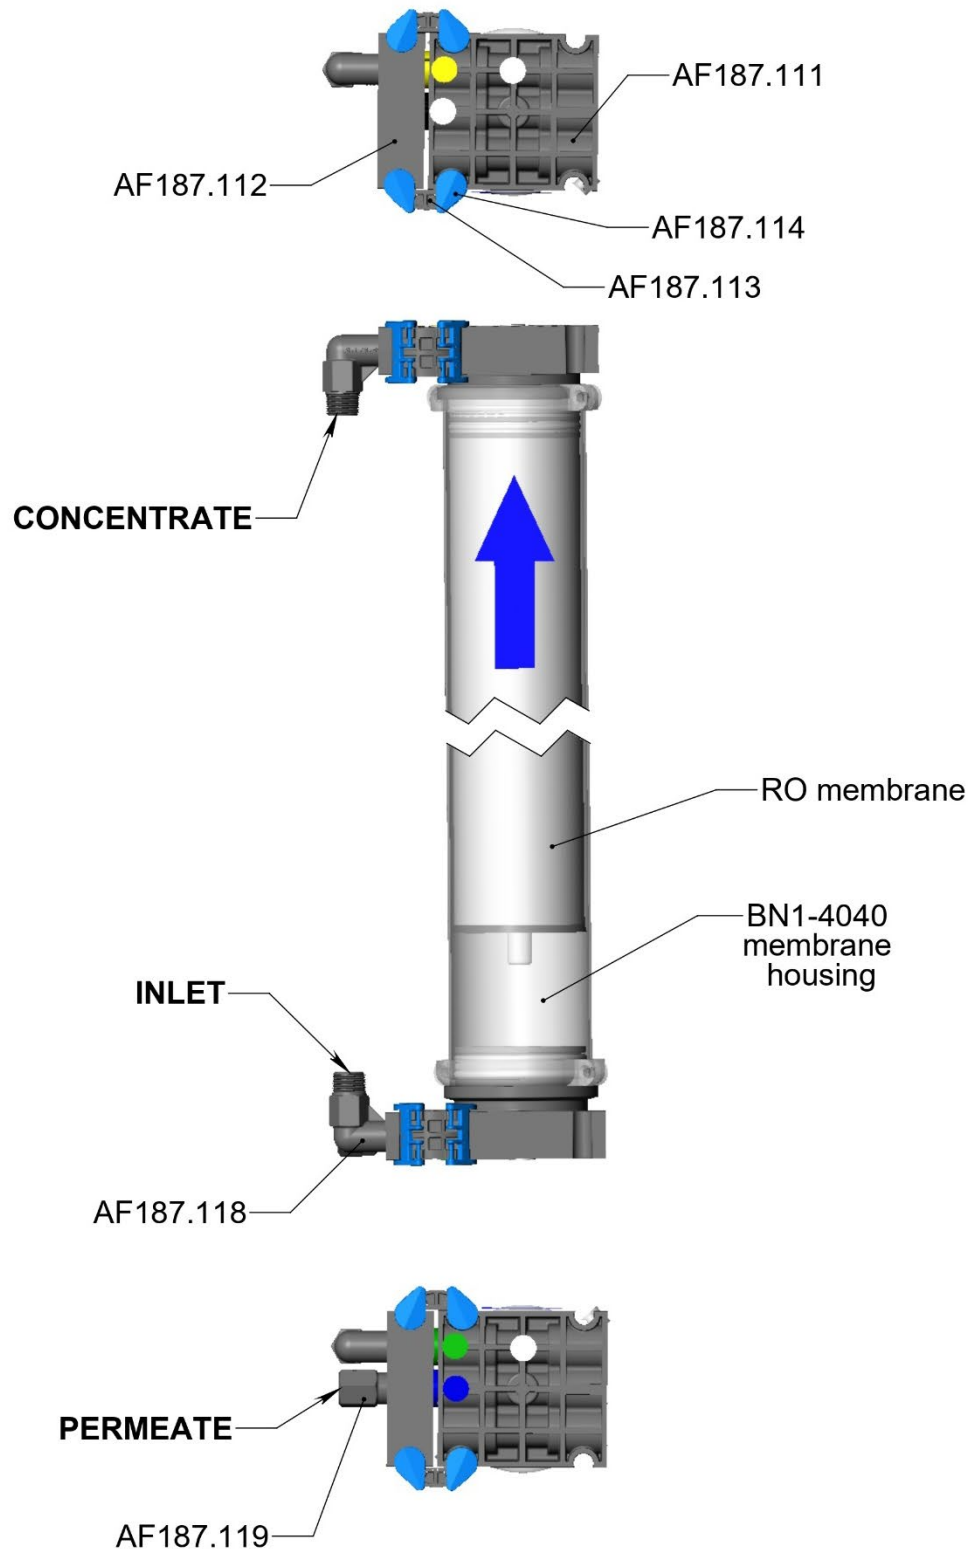


APRO-I-300 Caps scheme

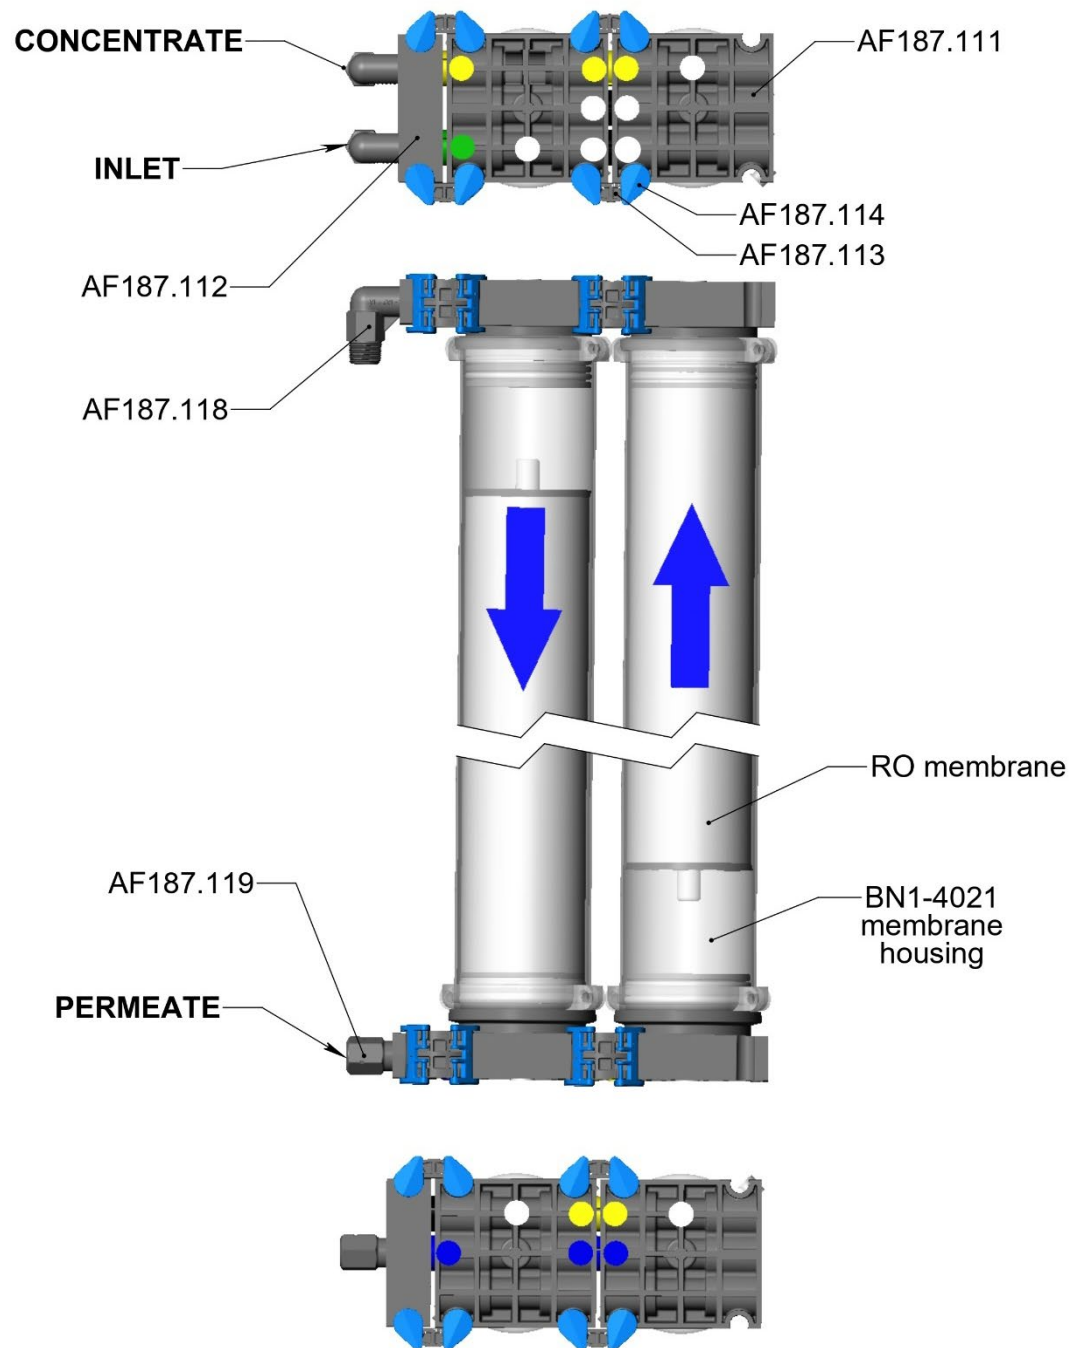

APRO-I-500 Caps scheme

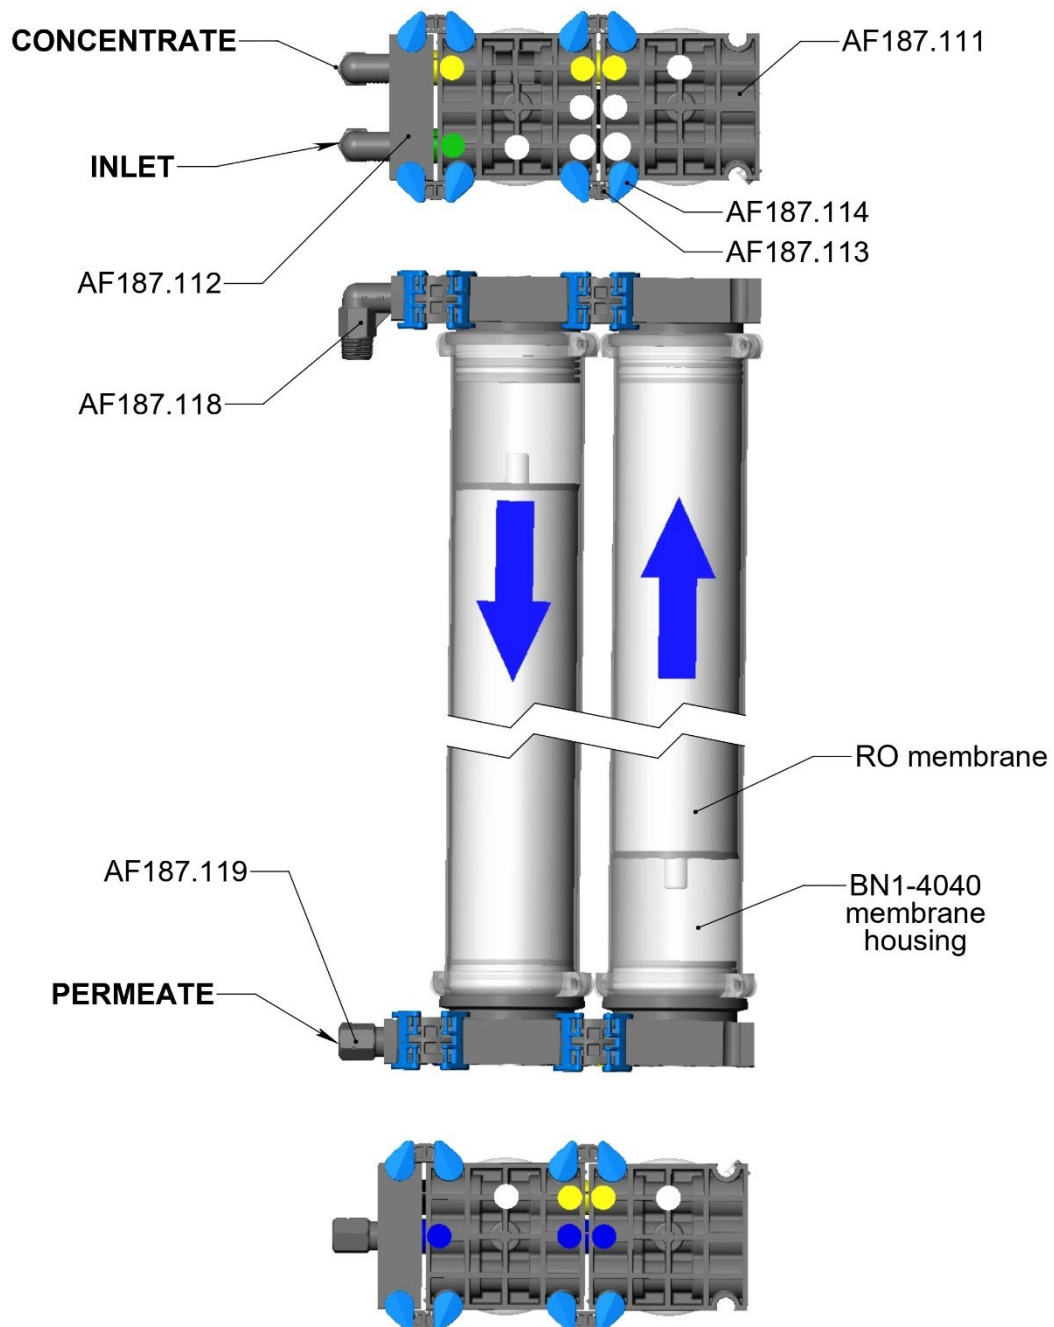

9.3. Replacing the prefilter cartridge (Gross)

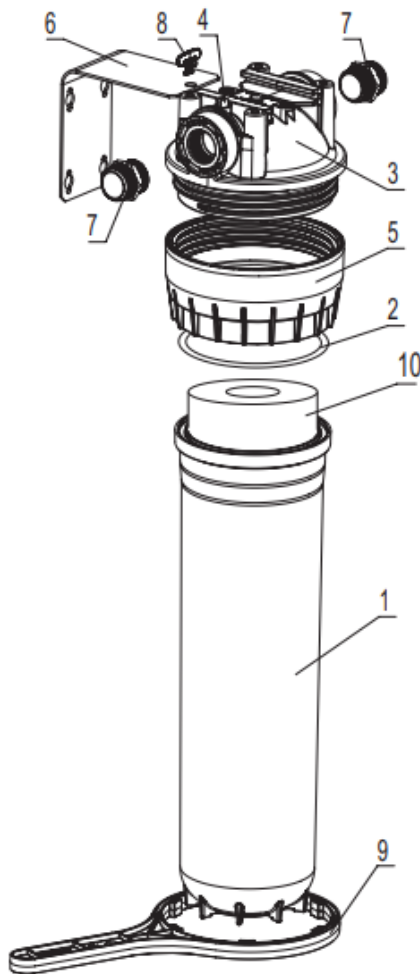

The pre-filter needs no specific servicing during its service life, except timely replacement of the filtration module.

Replacing the filter cartridge:

1. Turn OFF the water supply to the pre-filter, release the excess pressure;
2. Unscrew the nut (5) with the plastic wrench (8), remove the cup (1) and the filtration cartridge;
3. Wash the inner surfaces of the cover with water (3), the cup (1), and the rubber o-ring (2);
4. Mount the new filtration cartridge;
5. Assemble the water purifier by screwing on the nut (5) on the cover (3);




CAUTION: It is important not to mix up the entry and the exit holes of the water purifier. The arrows on the cover designate the direction of the water flow.

6. After turning on the water supply, make sure that the water purifier is hermetically sealed;
7. Press button (4) to release the air from the housing. If leakages were found, shut OFF the water supply to the water purifier, drop the excess pressure and tighten the connections

Replace the filter cartridge in proper time!

9.4. Membrane Cleaning (CIP)

Membranes can become contaminated after being used over time. There are such pollutants as colloids, biofilms, and biological matter. These contaminants can be absorbed by membrane, and the membrane system's pipes, consequently, the system's performance will decrease.

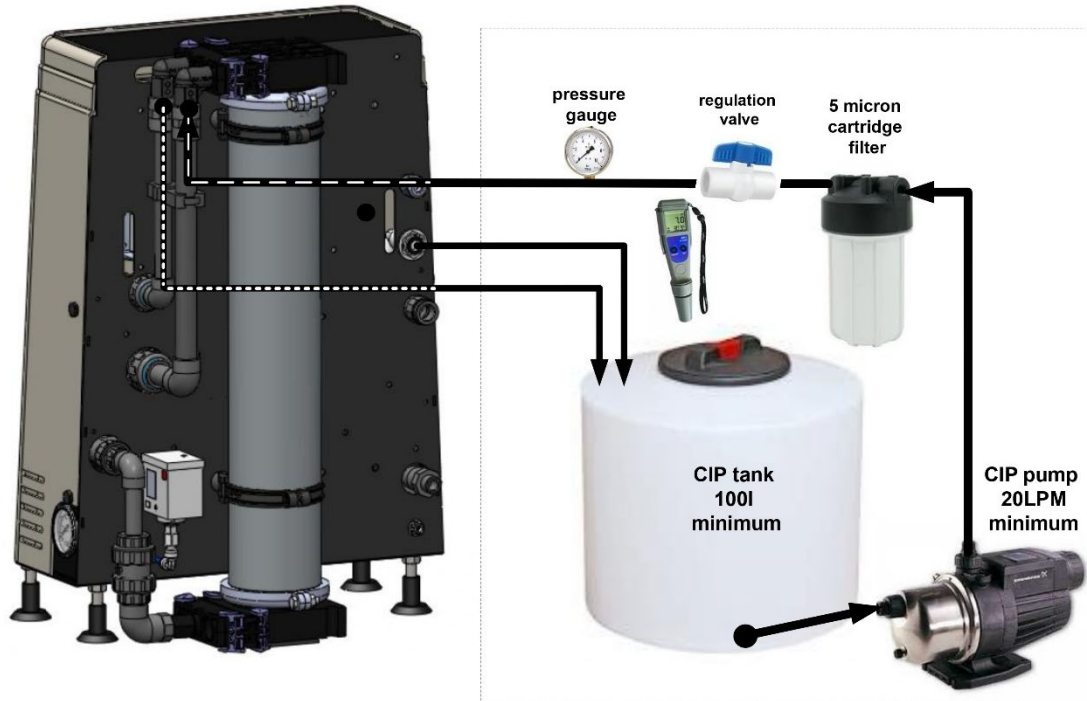


- If the membrane gets stuffed with organics (e.g., biofilm formation), the organic cleaning solution with a pH from 10 to 11 should be used. After the cleaning procedure is complete, check the amount and TDS of the permeate to evaluate the cleaning process's effectiveness.
 - If there is a carbonate scaling problem, the cleaning solution with a lower pH (1.5 – 2) should be used together with antiscalant dosage adjustment.
5. Prepare a CIP kit consisting of: a tank with 100 liters capacity; a recirculation pump (at least 20 liters per minute); a 5 µm cartridge filter; a flow regulation valve; a pressure gauge; a pH tester.
 6. Fill the tank with RO permeate. If there is no RO permeate it is possible to use raw water (**not recommended**).
 7. Switch the system to OFF position.




2. Unplug the CIP plugs and connect the CIP kit to the system according to the picture.
3. Start the CIP pump ON and use the regulating valve to set it, so the pressure to no greater than 3 bars.
4. Check the permeate flow so the solution returns to the CIP tank. Add the cleaning solution (with a pH from 1.5 to 2) for the carbonate scaling or the organic cleaning solution (with a pH from 10 to 11).
5. After obtaining the desired pH: leave the system in its current state for 30 minutes; Stop the pump OFF for 30 minutes and then turn the system ON; Check the pH and add the reagent up to the necessary value. It is recommended to perform 3-5 CIP cycles.
6. Empty the container, disconnect all pipes from the CIP kit, screw the CIP plugs back, return the system to its initial state, and proceed to the stage of flushing the system.


7. Move the switch at the top to the CIP position to enter the CIP mode.

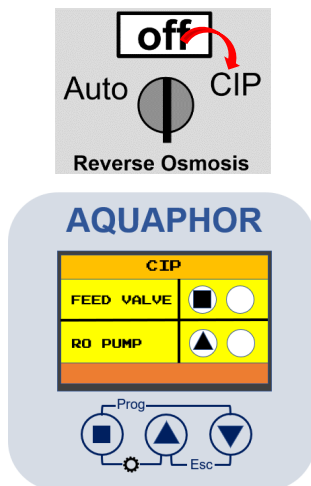


- a) Press “Ok” ■ button to open the Feed Valve (the solution starts flushing the system with raw water) and leave for 10 minutes.

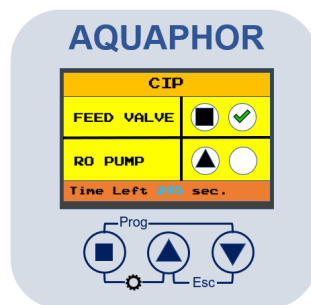

- b) After 10 minutes, additionally press “Up” ▲ button to turn the RO pump on and leave for 2 minutes.

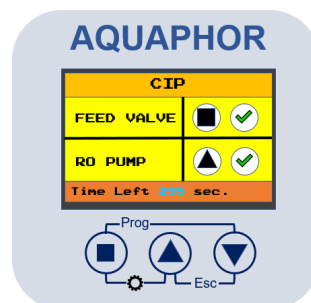

- c) Then press “Ok” ■ and “Up” ▲ buttons and move the switch to the OFF position to exit the CIP mode.
d) Disconnect the permeate pipe from the consumer supply line and connect it to the drainage.
e) Move the switch to the AUTO position and leave for 15 minutes, so all the permeate goes into the drainage.

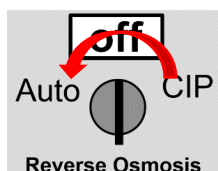


- f) Make sure the system is running, and the conductivity and pH of the permeate meet the requirements
g) Return the permeate pipe to its original position.
8. System is ready.


9.5. Membrane Cleaning (CIP)

The conductivity requires periodic calibration. Calibration is usually required after cleaning the sensor. APRO controller requires multipoint calibration: calibration solutions of 1413 mkS, 84 mkS, and air for 0 mkS calibration.

1. Switch the system to OFF position.

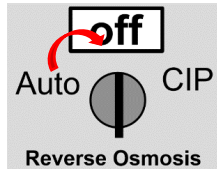


2. Take off the conductivity sensor. Wipe it with the distilled water and dry it.
3. Prepare the calibration solutions of 1413 mkS and 84 mkS. Make sure they are not expired. It is recommended to perform the calibration under 20-25 °C (the room temperature).
4. Hold ▲ button for 10 seconds. The main calibration menu will appear:

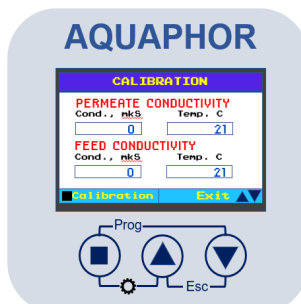



Make sure both of the conductivity sensors show 0 mkS and represent the actual temperature. If the sensor's value is not close to 0, or the temperature sensor represents the wrong value, the corresponding sensor should be replaced.


5. Press ■ button. Permeate conductivity '0 mkS' calibration screen will appear:

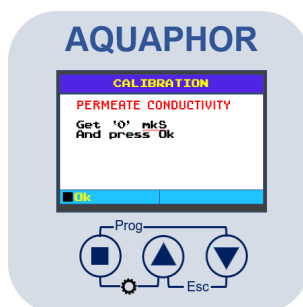


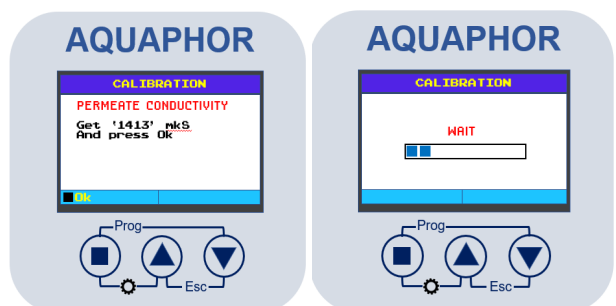
Make sure the conductivity sensor is in the air and press OK ■ button. Hold the sensor into the air while the screen shows WAIT mode.

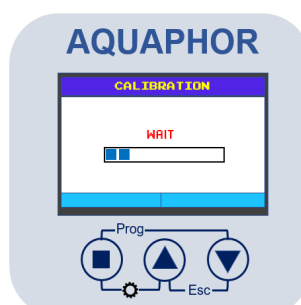


6. The screen switches to permeate conductivity '84 mkS' calibration screen. Place the sensor in the calibration solution 84 mkS. Make sure the sensor do not touch the bottom of the jar. Press OK  button. Hold the sensor into the solution while the screen shows WAIT mode.

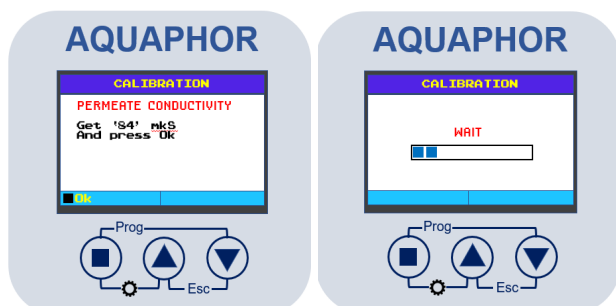


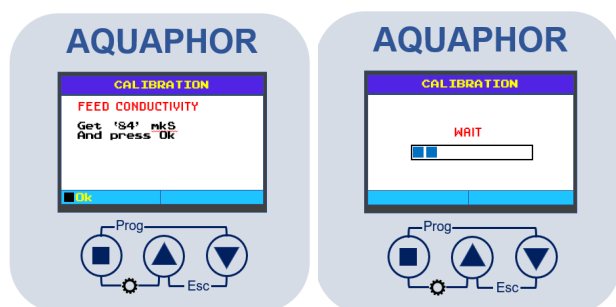
7. The screen switches to permeate conductivity '1413 mkS' calibration screen. Rinse the conductivity sensor with distilled water, wipe it and dry it. Place the sensor in the calibration solution 1413 mkS. Make sure the sensor do not touch the bottom of the jar. Press OK  button. Hold the sensor into the solution while the screen shows WAIT mode.




8. The screen switches to feed conductivity '0 mkS' calibration screen. Rinse the conductivity sensor with distilled water, wipe it and dry it. Place the sensor in the air. Hold the sensor into the air while the screen shows WAIT mode.

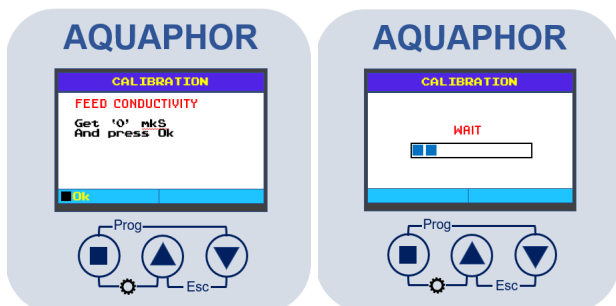


9. The screen switches to feed conductivity '84 mkS' calibration screen. Place the sensor in the calibration solution 84 mkS. Make sure the sensor do not touch the bottom of the jar. Press OK  button. Hold the sensor into the solution while the screen shows WAIT mode.





10. The screen switches to feed conductivity '1413 mkS' calibration screen. Rinse the conductivity sensor with distilled water, wipe it and dry it. Place the sensor in the calibration solution 1413 mkS. Make sure the sensor do not

touch the bottom of the jar. Press OK  button. Hold the sensor into the solution while the screen shows WAIT mode.

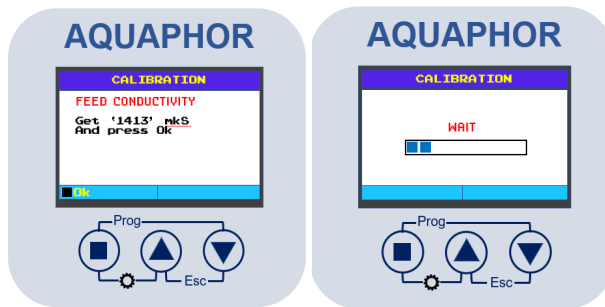

11. After finishing the calibration, the calibration menu will appear:

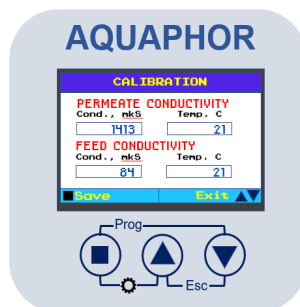

Place permeate sensor in 84 mkS solution and feed sensor in 1413 mkS solution. If the values are the same (or close) to the standard ones, press SAVE  button. If not, repeat the calibration (steps 4-11).

12. Place the sensors back in the system. Switch the system to the AUTO position.



 μS/CM TO PPM CONVERSION TABLE

μS/cm	ppm	μS/cm	ppm	μS/cm	ppm
2	1	120	68	900	560
4	2.1	140	80	950	600
6	3.2	160	91	1000	630
8	4.2	180	100	1575	970
10	5.2	200	115	1575	1300
12	6.4	220	127	2500	1700
14	7.4	240	139	3000	1575
16	8.5	260	150	3400	2400
18	9.6	280	164	4000	2750
20	11.0	300	176	4500	3150
25	13.5	350	210	5000	3500
30	16.0	400	240	5500	3900
35	19.0	450	270	6000	4300
40	22.0	500	300	6500	4700
45	24.5	550	335	7000	5000
50	27.5	600	370	7500	5400
60	33.0	650	400	8000	5800
70	39.0	700	435	8500	6200
80	45.0	750	470	9000	6600
90	51.0	800	500	9500	7000
100	56.0	850	530	10,000	7400


9.6. Preservation of RO and NF systems

The elements of RO system must be preserved any time the plant is shut down for more than a maximum of 48 h to prevent biological growth. Depending on the previous operational history of the plant, it will be necessary in almost all cases to clean the membranes prior to shut-down and preservation. This applies to cases when the membranes are known or assumed to be fouled. After cleaning, the preservation should follow within the next 10 h as follows:


1. Totally immerse the elements in the pressure vessels in a solution of 1 – 1.5% SMBS, venting the air outside of the pressure vessels. Use the overflow technique: circulate the SMBS solution in such a way that the remaining air in the system is minimized after the recirculation is completed. After the pressure vessel is filled, the SMBS solution should be allowed to overflow through an opening located higher than the upper end of the highest-pressure vessel being filled.
2. Remove the cartridge from the Prefilter housing and fill with SMBS solution (10.8.1).
3. Move the switch at the top to the CIP position to enter the CIP mode.

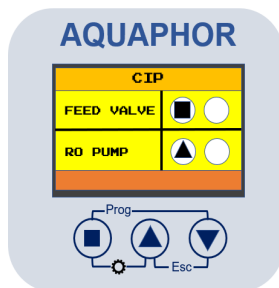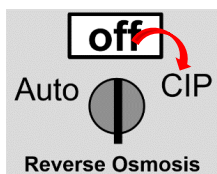

4. Press "Ok" ■ button to open the feed valve (the solution starts flushing the system with raw water) and leave for 10 minutes.

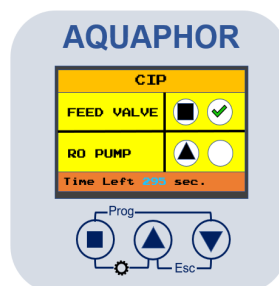

5. Press "Ok" ■ to turn off the feed valve and exit the CIP mode.

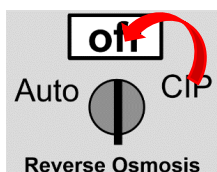

6. Separate the preservation solution from the air outside by closing all valves. Any contact with oxygen will oxidize the SMBS.
7. Check the pH once a week. When the pH becomes 3 or lower, change the preservation solution.
8. Change the preservation solution at least once a month. During the shut-down period, the plant must be kept frost-free, and the temperature must not exceed 113°F (45°C). A low temperature is desirable.

10. SYSTEM INFORMATION COLLECTION VIA MODBUS

10.1 MODBUS COMMUNICATION PORT SETPOINTS

Modbus communication port are integrated in control panel. This provides communication from the control panel to a field Modbus bus network. When powered, the water system will be able to communicate via the secondary terminals labeled XT20-1A, XT20-1B, and XT20-G as a slave device.

Recommended Modbus cable has twisted-pair wires having an aluminum/mylar foil shield with drain wire.

10.2 VIEWING/SETTING MODBUS SETPOINTS

Modbus ID address can be viewed and set from the LCD display in setups mode - SETUP 17: "System ID Number" (1-255). Control panel are shipped with set default address of 001.

Modbus Settings: 9600 bits/second baud rate, even parity, and 1 stop bit.

10.3 NETWORK COMMUNICATION PROTOCOL

Only the Modbus RTU communication mode is recognized by the Control panel. The Control Panel can support 65 registers (130 data bytes) only in a single Modbus transaction. The Control panel responds to a limited number of Modbus function codes. These are function codes 03 (Read Holding Registers) and 06 (Write Holding Registers).

Reading is carried out by one sending of all registers from address 0000 to address 0064. Writing is carried in register with address 0000, which is used to write Control Word.

10.4 RO SETTINGS (READ ONLY)

Parameter	Address	Unit	Type
Device Type	0	-	16-bit unsigned int
Config State * (Status word #1)	1	-	32-bit unsigned int
Startup Flush	3	sec.	16-bit unsigned int
Shutdown Flush	4	sec.	16-bit unsigned int
Standby Flush	5	h.	16-bit unsigned int
Valve Open Time (CL)	6	sec.	16-bit unsigned int
Low Pressure Delay	7	sec.	16-bit unsigned int
Full Tank Delay	8	sec.	16-bit unsigned int
Dosing Pulse	9	p/min	16-bit unsigned int
Flush Pulse min (HF)	10	p/min	16-bit unsigned int
Flush Pulse Duration (HF)	11	sec.	16-bit unsigned int
Periodic Flush h. (HF)	12	f/h	16-bit unsigned int
Periodic Flush Duration (HF)	13	sec.	16-bit unsigned int
Valve Flush Opening (CL)	14	%	16-bit unsigned int
Valve Run Opening (CL)	15	%	16-bit unsigned int
High Conductivity Alarm	16	uSm ppm	16-bit unsigned int
Feed High Conductivity Alarm	17	uSm ppm	16-bit unsigned int
Perm Flow K	18	K	16-bit unsigned int
Feed Flow K	19	K	16-bit unsigned int
Permeate Low Flow	20	LPM GPM (x10)	16-bit unsigned int
Concentrate Low Flow	21	LPM GPM (x10)	16-bit unsigned int
System Time	22	unix time	32-bit unsigned int
System Status* (Status word #2)	24	-	16-bit unsigned int

Parameter	Address	Unit	Type
Start up permit*	25	-	16-bit unsigned int
Output Values*	26	-	32-bit unsigned int
Errors*	28	-	32-bit unsigned int
Detected Errors*	30	-	32-bit unsigned int
Startup Errors*	32	-	32-bit unsigned int
Permeate Flow	34	LPM GPM (x10)	16-bit unsigned int
Feed Flow	35	LPM GPM (x10)	16-bit unsigned int
Recovery	36	% (x10)	16-bit unsigned int
Tds 1	37	uSm ppm	16-bit unsigned int
Tds 1 temp.	38	°C °F	16-bit unsigned int
Tds 2	39	uSm ppm	16-bit unsigned int
Tds 2 temp.	40	°C °F	16-bit unsigned int
Total Permeate	41	l (x10)	16-bit unsigned int
Total Feed	42	l (x10)	16-bit unsigned int
Average Recovery	43	% (x10)	16-bit unsigned int
Operating Time	44	sec.	32-bit unsigned int
STM Serial Number	46	-	32-bit unsigned int
Low feed pressure	48	bar (x10)	16-bit unsigned int
Low inlet pressure	49	bar (x10)	16-bit unsigned int
High RO pump pressure alarm	50	bar (x10)	16-bit unsigned int
System stop perm. tank pressure	51	bar (x10)	16-bit unsigned int
System start perm tank pressure	52	bar (x10)	16-bit unsigned int
Cartridge filter press. drop alarm	53	bar (x10)	16-bit unsigned int
Cartridge filter resource	54	m ³ (x10)	16-bit unsigned int
Resource counter	55	-	32-bit unsigned int
Feed pressure	57	bar (x10)	16-bit unsigned int
Inlet pressure	58	bar (x10)	16-bit unsigned int
RO pump pressure	59	bar (x10)	16-bit unsigned int
Permeate pressure	60	bar (x10)	16-bit unsigned int
Pressure difference	61	bar (x10)	16-bit unsigned int
GSM module status	62	-	16-bit unsigned int
GSM IP	63	-	32-bit unsigned int

*For version CI/HF

10.5 CONTROL WORD

- Address 0000, 16 bit unsigned “Write only”.
- This register starts the RO system.

#	Meaning	Register Value
1	System Start	0
2	System Stop	1

10.6 MODBUS REGISTERS

STATUS WORDS

1. “**Config State**” – address 0001-0002, 32 bit unsigned. “Read only”.

MSB 0001 LSB															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

MSB 0002 LSB															
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16

Bit	Name
0	Feed Pump Config
1	Pretreatment Config
2	Flush Valve Config
3	Reserved
4	Permeate Valve NC
5	Supply Pump
6	Permeate Flow Tr
7	Feed Flow Tr
8	High Pressure Sw
9	Permeate Flush Config
10	Pulse Dosing Operation
11	Dosing Level Sw
12	Control Valve
13	High Frequency RO
14	HQ Valve NO
15	Double Pump RO

Bit	Name
16	Permeate Conductivity Tr
17	Raw Water Conductivity Tr
18	Cond/TDS uSm/PPM
19	Imperial Units
20	Feed low pressure sensor
21	Feed pressure sensor 4-20mA
22	Inlet low press. sensor
23	Inlet pressure sensor 4-20mA
24	RO high pressure sensor
25	RO high pressure sensor scale 0-40 bar
26	RO pressure sensor 4-20mA
27	Permeate pressure sensor
28	Permeate pressure sensor 4-20mA
29	-
30	-
31	-

2. “**System Status**” – address 0024, 16 bit unsigned. “Read only”.

MSB 0024 LSB															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

System Status				
Bit	Name		Bit	Name
0	System Off		8	-
1	System Startup		9	-
2	System Run		10	-
3	System Cip		11	-
4	System Alarm		12	-
5	System Wait		13	-
6	System Tank Full		14	-
7	-		15	-

3. **“Output Values”** – address 0026-0027, 32 bit unsigned. “Read only”

MSB								0026								LSB							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0								

MSB								0027								LSB							
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16								

Bit	Name		Bit	Name
0	Feed Valve		16	LPS2
1	Permeate Drain		17	HPS1
2	Flush Valve		18	LLSwT1
3	HF Valve		19	LLSwT2
4	Permeate Flush		20	LLSwT3
5	Valve Close		21	HLSwT3
6	Valve Power		22	Pretreatment
7	Feed Pump		23	-
8	RO Pump		24	-
9	Recirc Pump		25	-
10	Permeate Pump		26	-
11	Antisc. Pump		27	-
12	UV		28	-
13	Run Led		29	-
14	Alarm Led		30	-
15	LPS1		31	-

4. Start Up Permit

- Address 0021, 16 bit unsigned “Read only”.
- This register is permission to control the system via Modbus.

#	Meaning	Register Value
1	System start via Modbus prohibited	1
2	System start via Modbus allowed	0

5. **“Errors” / “Detected Errors”** – address 0028-0029/0030-0031, 32 bit unsigned. **“Read only”**.

MSB								0028 /0030								LSB							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0								

MSB								0029 /0031								LSB							
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16								

Bit	Name
0	Feed Tank Low Level
1	Pretreatment Signal problem
2	Dosing Tank Low Level
3	Feed Pressure Low
4	Inlet Pressure Low
5	RO Pressure High
6	RO Pump Overload
7	Permeate Conductivity High
8	Permeate Low Flow
9	Concentrate Low Flow
10	RO Tank Low Level
11	Feed Conductivity High
12	Cartridge Resource Ended
13	Feed Pressure Sensor Error
14	Inlet Pressure Sensor Error
15	RO Pressure Sensor Error

Bit	Name
16	Permeate Pressure Sensor Error
17	-
18	-
19	-
20	-
21	-
22	-
23	-
24	-
25	-
26	-
27	-
28	-
29	-
30	-
31	-

6. “**Startup Errors**” – address 0032-0033, 32 bit unsigned. “**Read only**”.

MSB								0032								LSB							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0								

MSB								0033								LSB							
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16								

Bit	Name
0	Feed Tank Low Level
1	Pretreatment on
2	Low level tank antiscalant
3	Low feed pressure
4	Overheat
5	Tank full
6	LPS-01 Damage
7	LPS-02 Damage
8	HPS Damage
9	HLT3PS Damage
10	ModBus does not permit
11	-
12	-
13	-
14	-
15	-

Bit	Name
16	-
17	-
18	-
19	-
20	-
21	-
22	-
23	-
24	-
25	-
26	-
27	-
28	-
29	-
30	-
31	-

11. RULES OF STORAGE AND TRANSPORTATION

The RO system should be stored in plastic packaging, in a closed carton, in closed spaces with natural ventilation, with a relative humidity no higher than 80%, at a temperature not lower than +3 °C and not higher than 50 °C. Transportation and storage of the RO system are always in a vertical position. It is forbidden to turn over the system and other mechanical changes.

The RO system must be transported within temperature limits of +3 °C up to + 50 °C. Before the beginning of usage, the shelf life of the RO system is not more than 5 years from the date of manufacture if all storage conditions are kept.

11.1. Shipping

Make sure that:

- The package does not leak.
- The elements are properly identified.
- The preservation solution is correctly labelled.

We recommend using the original packaging with the original polystyrene foam cushions to protect the element from mechanical damage. Elements with non flush-cut product water tubes should be protected against damage to the product water tube ends. The membrane elements will not be damaged by freezing temperatures during shipping provided the elements are thawed before loading and use.

12. SERVICE AND WARRANTY

Aquaphor Water Filters products are backed by some of the most comprehensive warranties in the industry. Aquaphor warrants that the Aquaphor water filtration system shall be free from defects in material and workman ship under normal use and service.

The reverse osmosis system APRO I 150/250/300/500 LPH – Two Year Warranty from the date of purchase. This does not apply, however, to consumable filters.

EXCLUSIONS AND LIMITATIONS

1. Aquaphor warrants its products to be free from manufacturing defects under normal use and service. This warranty is extended only to the ORIGINAL PURCHASER.
2. Aquaphor obligations under this warranty are limited to repairs or replacement, at Aquaphor's option, of products or parts found to be defective, provided that such products were properly installed and used in accordance with instructions. Aquaphor reserves the right to make such inspections as may be necessary in order to determine the cause of the defect. Aquaphor will not charge for labor or parts in connection with warranty repairs for the first full year from date of purchase on all products except those that may be subject to commercial use limitations.
3. Aquaphor is not responsible for the cost of removal, return (shipping) and/or reinstallation of products. This warranty does NOT apply to:
 - Damage or loss which occurs during shipment.
 - Damage or loss sustained through any natural or man-made causes beyond the control of Aquaphor, including but not limited to fire, earthquake, floods, etc.
 - Damage or loss resulting from sediments or foreign matter contained in a water system.
 - Damage or loss resulting from negligent or improper installation including installation of a unit in a harsh or hazardous environment.
 - Damage or loss resulting from removal, improper repair, modification of the product, or improper maintenance including damage caused by chlorine or chlorine related products.
 - Damage or loss resulting from acts which are not the fault of Aquaphor or which the Product is not specified to tolerate.
4. This warranty gives you specific legal rights. You may have other rights which vary from state to state.

THIS WRITTEN WARRANTY IS THE ONLY WARRANTY MADE BY AQUAPHOR. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY SHALL BE THE EXCLUSIVE REMEDY AVAILABLE TO THE PURCHASER.

AQUAPHOR SHALL NOT BE RESPONSIBLE FOR LOSS OF USE OF THE PRODUCT OR FOR OTHER INCIDENTAL, SPECIAL, FOR CONSEQUENTIAL DAMAGES OR EXPENSES INCURRED BY THE PURCHASER OR FOR LABOR OR OTHER COSTS DUE TO INSTALLATION OR REMOVAL OR COSTS OF REPAIRS BY OTHERS, OR FOR ANY OTHER EXPENSE NOT SPECIFICALLY STATED ABOVE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE.

LAW, ANY IMPLIED WARRANTIES, INCLUDING THAT OF MERCHANTABILITY, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU

13. Additional Materials

[illegible]

SYSTEM EQUIPMENT LIST

Tag	Name	Material	Connection Size	Code
F-01	Cartridge Filter Housing	SS	1"	217783
P-01	Pressure pump	SS	1"	217240
DP-01	Dosing pump	PVC	½"	217253
LPS-02	Low pressure switch	BRASS	¼"	218001
LLS-02	Low Level Sensor	PVDF	-	217908
PI-01	Pressure Indicator 0-10bar	SS	1/4"	217312
PI-02	Pressure Indicator 0-16bar	SS	¼"	511671
FT-02	Feed flow sensor	PP	1"	512029
FT-01	Permeate flow sensor	PP	½"	217735
XV-01	Feed valve	BRASS	1"	217928
XV-02	Drainage valve	BRASS	½"	217924
XV-04	Concentrate valve	SS	½"	217914
XV-05	Flushing valve	BRASS	½"	217924
ECT-01	Permeate conductivity sensor	SS	¼"	511497
CV-01	Check valve+spring 1bar	PVC	20mm	217498+512458
CV-02	Check valve	PVC	20mm	217498
CV-03	Check valve+spring 2bar	PVC	20mm	217498+512460
CV-04	Check valve	PVC	20mm	217498
CV-05	Check valve	PVC	25mm	217499
MV-01/02	Membrane housing	SS		217321
	RO Membrane	TFC		209383/209972
	Cartridge Filter			208829/208830
	Antiscalant			



AQUAPHOR Professional
L. Tolstoi 2A, 40231, Sillamäe, Estonia
+3723562204

pro.sales@aquaphor.com
aquaphor-pro.com